

MODEL:
KINO-DH310

**Mini-ITX SBC Supports 8th Generation LGA1151 14nm
Intel® Core™ i7/i5/i3, Pentium® or Celeron® CPU,
DDR4, Dual Independent Display, Dual GbE LAN,
Dual M.2, SATA 6Gb/s, HD Audio and RoHS**

User Manual

Revision

Date	Version	Changes
March 26, 2020	1.02	Modified Table 3-17: M.2 M-Key Slot Pinouts
January 28, 2019	1.01	Modified Table 1-1: KINO-DH310 Specifications
May 25, 2018	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions

**WARNING**

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.

**CAUTION**

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.

**NOTE**

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.

Table of Contents

1 INTRODUCTION.....	1
1.1 INTRODUCTION.....	2
1.2 FEATURES.....	3
1.3 CONNECTORS	4
1.4 DIMENSIONS.....	5
1.5 DATA FLOW	6
1.6 TECHNICAL SPECIFICATIONS	7
2 PACKING LIST.....	10
2.1 ANTI-STATIC PRECAUTIONS.....	11
2.2 UNPACKING PRECAUTIONS.....	11
2.3 PACKING LIST.....	12
2.4 OPTIONAL ITEMS.....	13
3 CONNECTORS	14
3.1 PERIPHERAL INTERFACE CONNECTORS.....	15
3.1.1 KINO-DH310 Layout.....	15
3.1.1 Peripheral Interface Connectors	17
3.1.2 External Interface Panel Connectors.....	18
3.2 INTERNAL PERIPHERAL CONNECTORS	19
3.2.1 Audio Connector	19
3.2.2 Battery Connector.....	20
3.2.1 Buzzer Connector.....	21
3.2.2 Chassis Intrusion Connector.....	22
3.2.3 DDR4 SO-DIMM Sockets	23
3.2.4 Digital I/O Connector.....	24
3.2.1 DisplayPort Connector (Optional)	25
3.2.2 EC Debug Connector.....	26
3.2.3 Fan Connector (CPU).....	27
3.2.4 Fan Connector (System)	28

3.2.5 Front Panel Connector	29
3.2.6 I ² C Connector	30
3.2.1 Internal Power Connector	30
3.2.2 Keyboard and Mouse Connector	31
3.2.3 LAN LED Connectors	32
3.2.1 M.2 Slot, A-key.....	33
3.2.1 M.2 Slot, M-key.....	35
3.2.2 PCIe x16 Slot	37
3.2.3 RS-232 Serial Port Connector	37
3.2.1 RS-422/485 Serial Port Connector	38
3.2.2 SATA 6Gb/s Drive Connectors.....	40
3.2.1 SATA Power Connectors	41
3.2.2 SMBus Connector	42
3.2.3 SPI Flash Connector.....	43
3.2.4 SPI Flash Connector, EC.....	44
3.2.1 TPM Connector.....	45
3.2.2 USB 2.0 Connectors.....	46
3.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL	47
3.3.1 Audio Connector	47
3.3.2 Ethernet and USB 3.2 Gen 1 Connectors	48
3.3.1 HDMI Connectors.....	49
3.3.1 RS-232 Connectors	50
3.3.1 Power Connector (Power Adapter)	51
4 INSTALLATION	52
4.1 ANTI-STATIC PRECAUTIONS.....	53
4.2 INSTALLATION CONSIDERATIONS.....	53
4.3 SOCKET LGA1151 CPU INSTALLATION	55
4.4 SOCKET LGA1151 COOLING KIT INSTALLATION	58
4.5 SO-DIMM INSTALLATION	60
4.6 M.2 MODULE INSTALLATION.....	61
4.7 SYSTEM CONFIGURATION.....	62
4.7.1 AT/ATX Power Mode Setting	62
4.7.2 Clear CMOS Button.....	62
4.7.3 Flash Descriptor Security Override Jumper.....	63

KINO-DH310 Mini-ITX Motherboard

4.7.4 USB Power Selection	64
4.8 INTERNAL PERIPHERAL DEVICE CONNECTIONS	65
4.8.1 SATA Drive Connection	65
4.9 AVAILABLE DRIVERS	66
4.9.1 Driver Download	66
5 BIOS	68
5.1 INTRODUCTION.....	69
5.1.1 Starting Setup.....	69
5.1.2 Using Setup	69
5.1.3 Getting Help.....	70
5.1.4 Unable to Reboot after Configuration Changes	70
5.1.5 BIOS Menu Bar.....	70
5.2 MAIN.....	71
5.3 ADVANCED.....	72
5.3.1 CPU Configuration	73
5.3.2 Trusted Computing.....	75
5.3.3 ACPI Settings	76
5.3.4 iWDD H/W Monitor.....	77
5.3.4.1 Smart Fan Mode Configuration	78
5.3.5 F81866 Super IO Configuration	79
5.3.5.1 Serial Port n Configuration	80
5.3.5.2 Serial Port 1 Configuration	80
5.3.5.3 Serial Port 2 Configuration	81
5.3.5.4 Serial Port 3 Configuration	82
5.3.5.5 Serial Port 4 Configuration	82
5.3.6 RTC Wake Settings	83
5.3.7 Serial Port Console Redirection	85
5.3.7.1 Legacy Console Redirection Settings	87
5.3.8 USB Configuration.....	88
5.3.9 NVMe Configuration.....	89
5.3.10 IEI Feature.....	90
5.4 CHIPSET	91
5.4.1 System Agent (SA) Configuration	92
5.4.1.1 Memory Configuration	93

5.4.1.2 Graphics Configuration.....	93
5.4.1.3 PEG Port Configuration.....	95
5.4.2 <i>PCH-IO Configuration</i>	97
5.4.2.1 PCI Express Configuration	99
5.4.2.2 SATA Configuration.....	101
5.4.2.3 HD Audio Configuration.....	102
5.5 SECURITY.....	103
5.6 BOOT.....	104
5.7 SAVE & EXIT	106
A REGULATORY COMPLIANCE	107
B PRODUCT DISPOSAL	109
C BIOS OPTIONS	111
D DIGITAL I/O INTERFACE.....	114
D.1 INTRODUCTION.....	115
D.2 ASSEMBLY LANGUAGE SAMPLE 1.....	116
D.3 ASSEMBLY LANGUAGE SAMPLE 2.....	116
E WATCHDOG TIMER.....	117
F ERROR BEEP CODE	120
F.1 PEI BEEP CODES	121
F.2 DXE BEEP CODES	121
G HAZARDOUS MATERIALS DISCLOSURE.....	122
G.1 RoHS II DIRECTIVE (2015/863/EU).....	123
G.2 CHINA RoHS.....	124

List of Figures

Figure 1-1: KINO-DH310.....	2
Figure 1-2: Connectors	4
Figure 1-3: KINO-DH310 Dimensions (mm)	5
Figure 1-4: Data Flow Diagram.....	6
Figure 3-1: Peripheral Interface Connectors (Front Side)	15
Figure 3-2: Peripheral Interface Connectors (Solder Side).....	16
Figure 3-3: Audio Connector Location	19
Figure 3-4: Battery Connector Location.....	20
Figure 3-5: Buzzer Connector Location	21
Figure 3-6: Chassis Intrusion Connector Location.....	22
Figure 3-7: DDR4 SO-DIMM Socket Locations	23
Figure 3-8: Digital I/O Connector Location	24
Figure 3-9: DisplayPort Connector Location	25
Figure 3-10: EC Debug Connector Location.....	26
Figure 3-11: CPU Fan Connector Location	27
Figure 3-12: System Fan Connector Location.....	28
Figure 3-13: Front Panel Connector Location	29
Figure 3-14: I ² C Connector Location	30
Figure 3-15: Internal Power Connector Pinout Location	31
Figure 3-16: Keyboard and Mouse Connector Location.....	31
Figure 3-17: LAN LED Connector Locations	32
Figure 3-18: M.2 A-key Slot Location.....	33
Figure 3-19: M.2 M-key Slot Location	35
Figure 3-20: PCIe x16 Slot Location	37
Figure 3-21: RS-232 Serial Port Connector Location.....	38
Figure 3-22: RS-422/485 Connector Location.....	39
Figure 3-23: SATA 6Gb/s Drive Connector Locations	40
Figure 3-24: SATA Power Connector Locations	41
Figure 3-25: SMBus Connector Location	42
Figure 3-26: SPI Flash Connector Location.....	43

Figure 3-27: SPI EC Flash Connector Location	44
Figure 3-28: TPM Connector Location.....	45
Figure 3-29: USB 2.0 Connector Locations	46
Figure 3-30: External Peripheral Interface Connector	47
Figure 3-31: Audio Connector	47
Figure 3-32: LAN Connector	49
Figure 3-33: HDMI Connector	50
Figure 3-34: COM1 Serial Port Pinout Locations	50
Figure 3-35: 4-pin Power Mini-DIN Connector	51
Figure 4-1: Disengage the CPU Socket Load Lever.....	55
Figure 4-2: Remove Protective Cover.....	56
Figure 4-3: Insert the Socket LGA1151 CPU.....	57
Figure 4-4: Close the Socket LGA1151	57
Figure 4-5: Cooling Kit Support Bracket.....	59
Figure 4-6: SO-DIMM Installation (DDR4).....	60
Figure 4-7: Inserting the M.2 Module into the Slot at an Angle	61
Figure 4-8: Securing the M.2 Module.....	61
Figure 4-9: AT/ATX Power Mode Switch Location	62
Figure 4-10: Clear CMOS Button Location.....	63
Figure 4-11: Flash Descriptor Security Override Jumper Location	63
Figure 4-12: SATA Drive Cable Connection.....	65
Figure 4-13: IEI Resource Download Center.....	66

List of Tables

Table 1-1: KINO-DH310 Specifications	9
Table 2-1: Packing List.....	12
Table 2-2: Optional Items	13
Table 3-1: Peripheral Interface Connectors	18
Table 3-2: External Peripheral Connectors	18
Table 3-3: Audio Connector Pinouts	19
Table 3-4: Battery Connector Pinouts	21
Table 3-5: Buzzer Connector Pinouts.....	21
Table 3-6: Chassis Intrusion Connector Pinouts	22
Table 3-7: Digital I/O Connector Pinouts.....	24
Table 3-8: EC Debug Connector Pinouts	26
Table 3-9: CPU Fan Connector Pinouts.....	27
Table 3-10: System Fan Connector Pinouts	28
Table 3-11: Front Panel Connector Pinouts.....	29
Table 3-12: I ² C Connector Pinouts.....	30
Table 3-13: Internal Power Connector Pinouts.....	31
Table 3-14: Keyboard and Mouse Connector Pinouts	32
Table 3-15: LAN LED Connector Pinouts	32
Table 3-16: M.2 A-Key Slot Pinouts	34
Table 3-17: M.2 M-Key Slot Pinouts	36
Table 3-18: RS-232 Serial Port Connector Pinouts	38
Table 3-19: RS-422/485 Connector Pinouts	39
Table 3-20: DB-9 RS-422/485 Pinouts	39
Table 3-21: SATA 6Gb/s Drive Connector Pinouts.....	40
Table 3-22: SATA Power Connector Pinouts.....	41
Table 3-23: SMBus Connector Pinouts	42
Table 3-24: SPI Flash Connector Pinouts	43
Table 3-25: SPI EC Flash Connector Pinouts	44
Table 3-26: TPM Connector Pinouts	45
Table 3-27: USB 2.0 Connector Pinouts.....	46

Table 3-28: USB 3.2 Gen 1 Port Pinouts.....	48
Table 3-29: LAN Pinouts	48
Table 3-30: HDMI Connector Pinouts	49
Table 3-31: COM1 Connector Pinouts	50
Table 4-1: AT/ATX Power Mode Switch Settings.....	62
Table 4-2: Flash Descriptor Security Override Jumper Settings.....	63
Table 4-3: BIOS Options and Configured USB Ports.....	64
Table 4-4: USB Power Source Setup	64
Table 5-1: BIOS Navigation Keys	70
Table 5-2: BIOS Options and Configured USB Ports.....	98

BIOS Menus

BIOS Menu 1: Main	71
BIOS Menu 2: Advanced	72
BIOS Menu 3: CPU Configuration	73
BIOS Menu 4: Trusted Computing	75
BIOS Menu 5: ACPI Configuration	76
BIOS Menu 6: iWDD H/W Monitor	77
BIOS Menu 7: Smart Fan Mode Configuration	78
BIOS Menu 8: F81866 Super IO Configuration	79
BIOS Menu 9: Serial Port n Configuration Menu	80
BIOS Menu 10: RTC Wake Settings	83
BIOS Menu 11: Serial Port Console Redirection	85
BIOS Menu 12: Legacy Console Redirection Settings	87
BIOS Menu 13: USB Configuration	88
BIOS Menu 14: NVMe Configuration.....	89
BIOS Menu 15: IEI Feature	90
BIOS Menu 16: Chipset	91
BIOS Menu 17: System Agent (SA) Configuration	92
BIOS Menu 18: Memory Configuration.....	93
BIOS Menu 19: Graphics Configuration.....	93
BIOS Menu 20: PEG Port Configuration.....	95
BIOS Menu 21: PEG Port Feature Configuration.....	96
BIOS Menu 22: PCH-IO Configuration	97
BIOS Menu 23: PCI Express Configuration	99
BIOS Menu 24: MPCIE1 Slot	100
BIOS Menu 25: SATA Configuration	101
BIOS Menu 26: HD Audio Configuration	102
BIOS Menu 27: Security	103
BIOS Menu 28: Boot	104
BIOS Menu 29: Save & Exit.....	106

Chapter

1

Introduction

1.1 Introduction

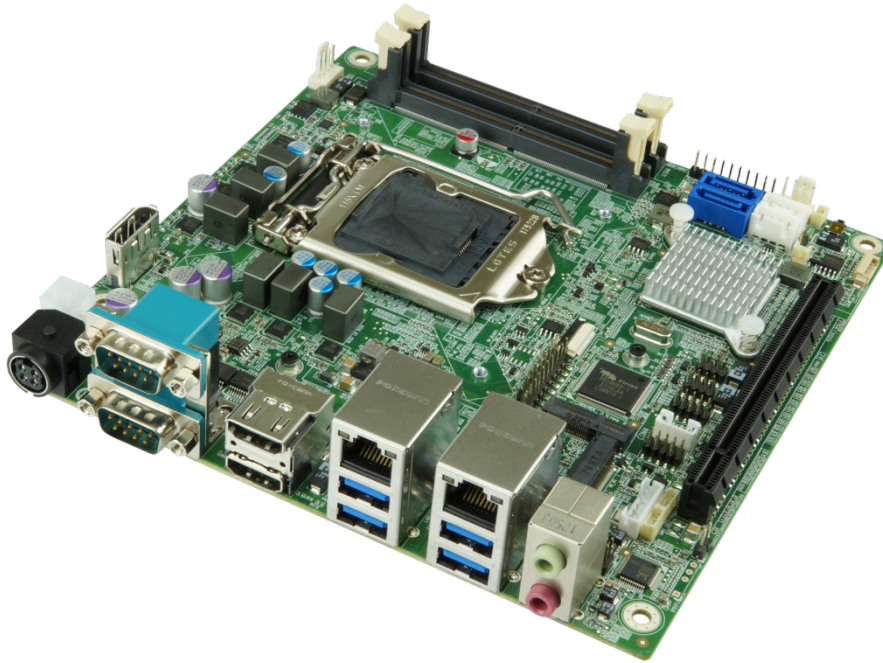


Figure 1-1: KINO-DH310

The KINO-DH310 is a Mini-ITX motherboard. It accepts a Socket LGA1151 Intel® Core™ i7/i5/i3, Pentium® or Celeron® processor and supports two 260-pin 2666/2400 MHz dual-channel DDR4 SO-DIMM modules for up to 64 GB of memory.

The KINO-DH310 provides two GbE interfaces through the Realtek RTL8111H PCIe Ethernet controllers. The integrated Intel® H310 chipset supports two SATA 6Gb/s drives, one M.2 2280 M-key slot supporting PCIe x2 signal and one M.2 2230 A-key slot supporting PCIe x1 and USB 2.0 signals. In addition, the KINO-DH310 includes two HDMI ports and one optional DisplayPort for dual independent display.

Expansion and I/O include one PCIe x16 slot, four USB 3.2 Gen 1 on the rear panel, four USB 2.0 by pin headers, three RS-232 ports and one RS-422/485 port. High Definition Audio (HDA) support ensures HDA devices can be easily implemented on the KINO-DH310.

KINO-DH310 Mini-ITX Motherboard

1.2 Features

Some of the KINO-DH310 motherboard features are listed below:

- Mini-ITX form factor
- 8th generation LGA1151 Intel® Core™ i7/i5/i3, Pentium® or Celeron® processor supported
- Intel® H310 chipset
- Two 260-pin 2666/2400 MHz dual-channel unbuffered DDR4 SO-DIMMs supported (system max. 64 GB)
- Two GbE connectors via Realtek RTL8111H PCIe GbE controllers
- Dual independent display by two HDMI ports and one optional DisplayPort
- Two SATA 6Gb/s connectors
- One M.2 M-key 2280 slot supports PCIe x2 signal, and one M.2 A-key 2230 slot supports PCIe x1 and USB 2.0 signals
- One PCIe 3.0 x16 slot
- Four USB 3.2 Gen 1 (5Gb/s) ports on the rear I/O
- Four USB 2.0 ports via internal pin headers
- Two RS-232 serial ports on the rear I/O
- One RS-232 serial port and one RS-422/485 port via internal pin headers
- High Definition Audio
- RoHS compliant

1.3 Connectors

The connectors on the KINO-DH310 are shown in the figure below.

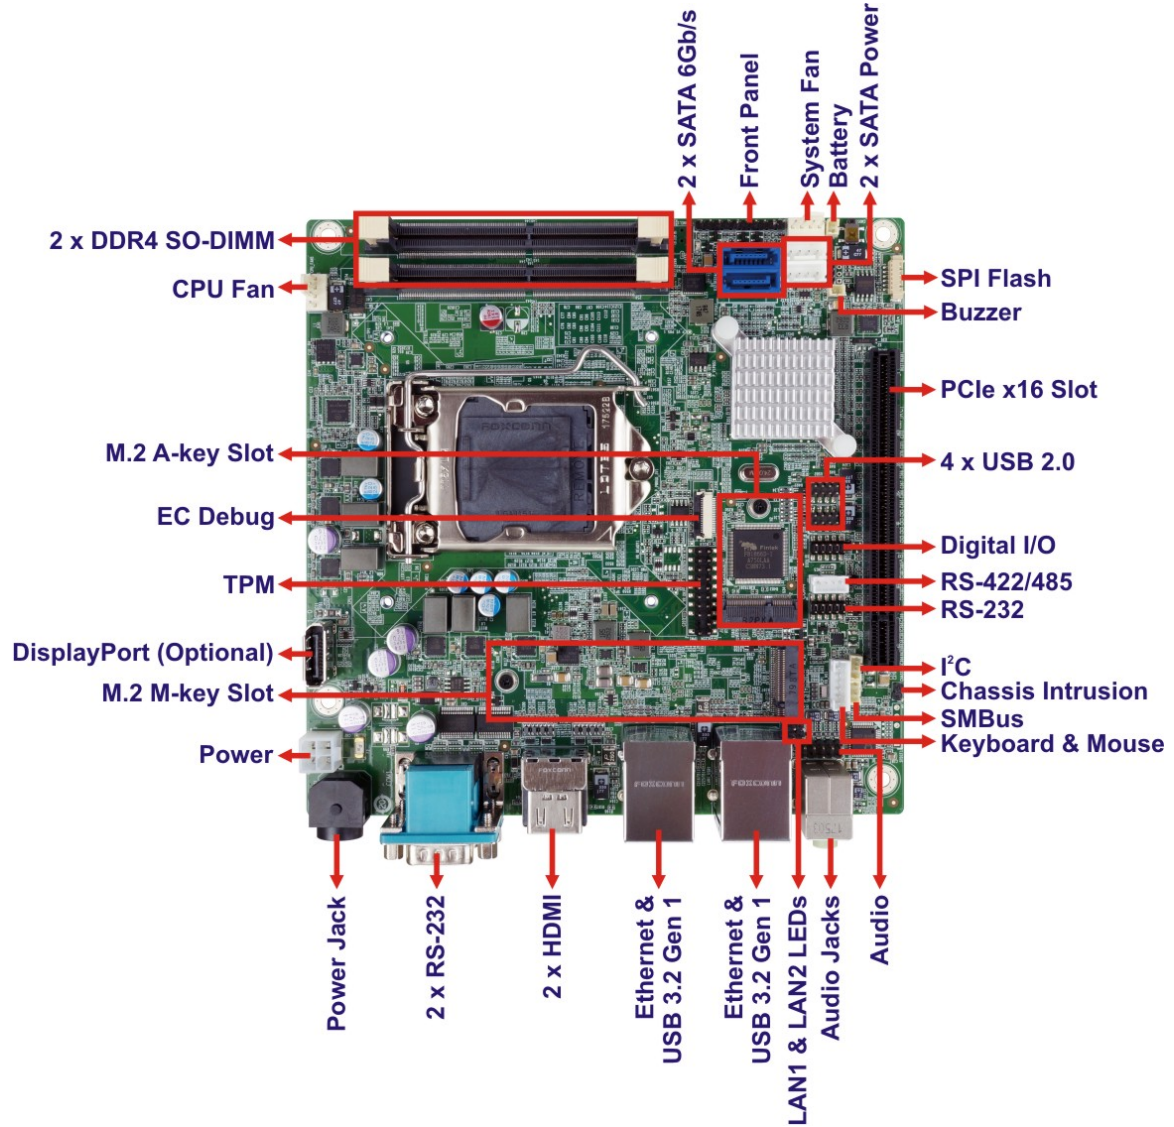


Figure 1-2: Connectors

KINO-DH310 Mini-ITX Motherboard

1.4 Dimensions

The main dimensions of the KINO-DH310 are shown in the diagram below.

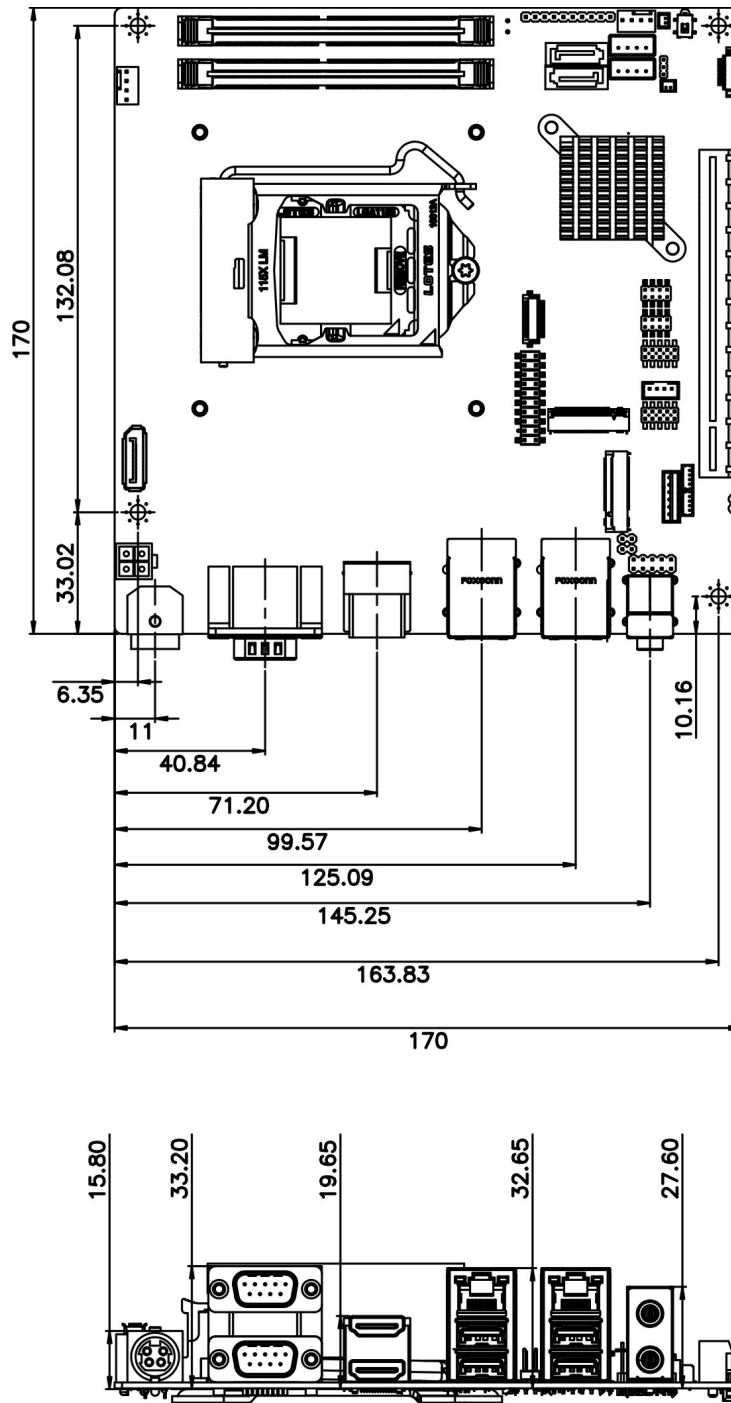


Figure 1-3: KINO-DH310 Dimensions (mm)

1.5 Data Flow

Figure 1-4 shows the data flow between the system chipset, the CPU and other components installed on the motherboard.

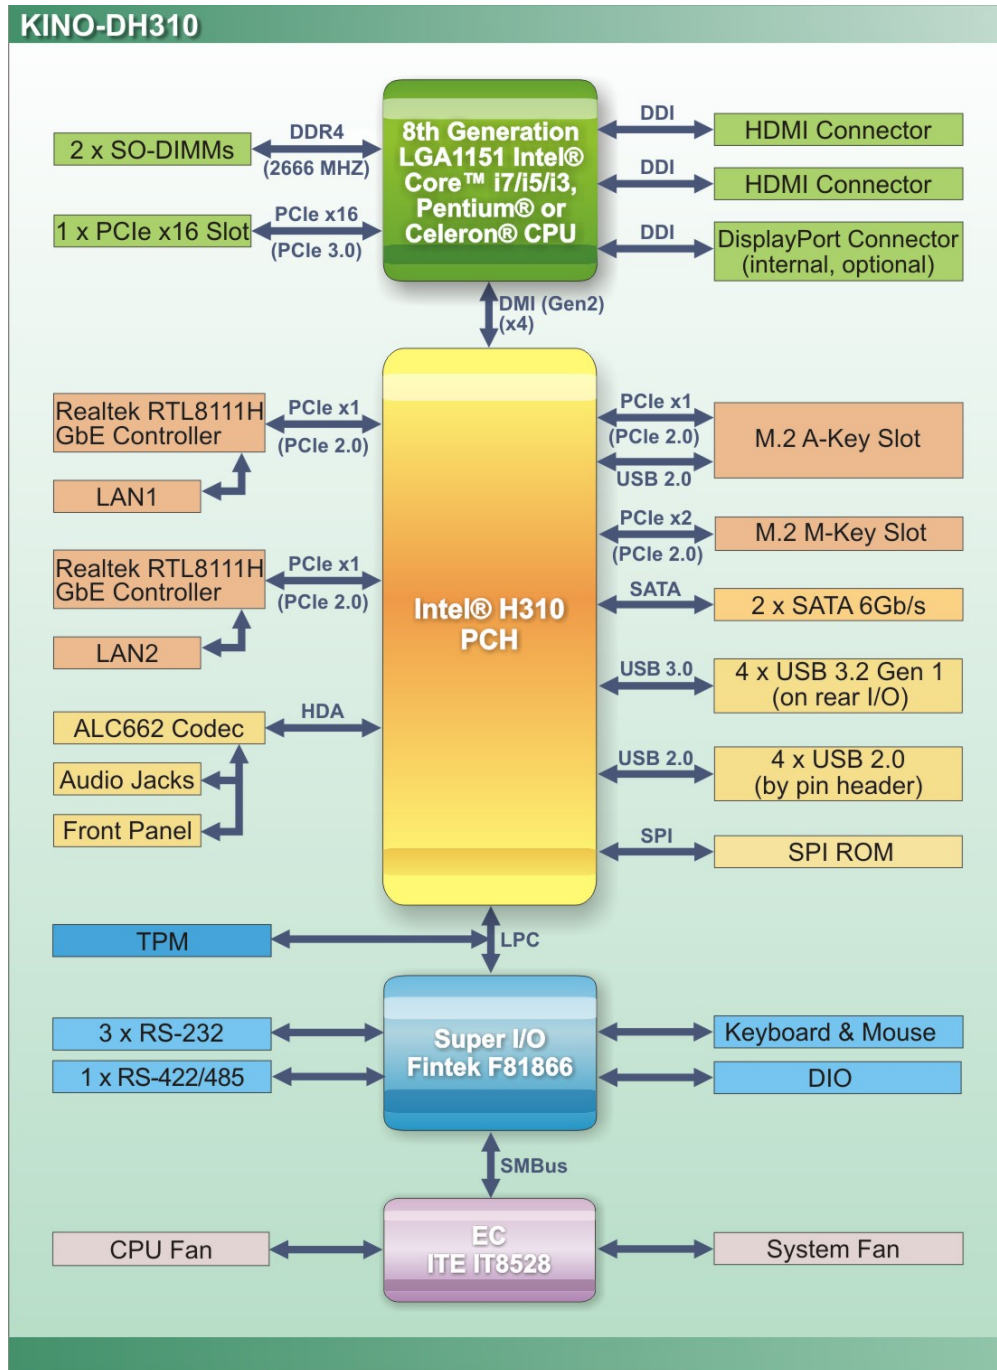


Figure 1-4: Data Flow Diagram

KINO-DH310 Mini-ITX Motherboard

1.6 Technical Specifications

The KINO-DH310 technical specifications are listed below.

Specification/Model	KINO-DH310
Form Factor	Mini-ITX
CPU Supported	8 th generation LGA1151 Intel® Core™ i7/i5/i3, Pentium® or Celeron® CPU (35 W / 65 W)
PCH	Intel® H310
Memory	Two 260-pin 2666/2400 MHz dual-channel unbuffered DDR4 SDRAM SO-DIMMs supported (system max. 64 GB)
Graphics Engine	Intel® HD Graphics Gen9 engine with 16 low-power execution units, supporting DX11.3/12, OpenGL 4.3/4.4/4.5 and OpenCL 1.2/2.0/2.1
Display Output	Supports dual independent display Two HDMI ports (up to 1920x1080@60Hz) One internal DisplayPort (optional, up to 4096x2304@60Hz)
Ethernet Controllers	Dual Realtek RTL8111H PCIe GbE controller
Audio	Realtek ALC662 HD Audio codec
BIOS	UEFI BIOS
Super I/O Controller	Fintek F81866
Watchdog Timer	Software programmable supports 1~255 sec. system reset
Expansions	One PCIe x16 slot (Gen 3) One M.2 M-key 2280 slot (PCIe x2 only) One M.2 A-key 2230 slot (PCIe x1 and USB 2.0 signals)
I/O Interface Connectors	
Audio Connectors	Line-out and mic-in audio jacks on rear panel One internal front panel audio connector (10-pin header)
Chassis Intrusion	One 2-pin header
Digital I/O	8-bit digital I/O

Ethernet	Two RJ-45 GbE ports
Fan	One 4-pin CPU smart fan connector One 4-pin system smart fan connector
Front Panel	One 10-pin header (power LED, HDD LED, speaker, power button, reset button)
I²C	One 4-pin wafer connector
Keyboard and Mouse	One internal keyboard and mouse connector (6-pin wafer)
LAN LED	Two 2-pin headers for LAN1 LED and LAN2 LED
Serial ATA	Two SATA 6Gb/s connectors (no RAID) Two 5 V / 12 V SATA power connectors
Serial Ports	One RS-232 via internal 10-pin header One RS-422/485 via internal 4-pin wafer Two RS-232 DB-9 on rear panel
SMBus	One 4-pin wafer connector
TPM	One 20-pin header
USB 2.0	Four USB 2.0 ports via internal pin headers
USB 3.2	Four USB 3.2 Gen 1 (5Gb/s) ports on rear panel
Environmental and Power Specifications	
Power Supply	12 V DC input One external DC jack (4-pin DIN) One internal power connector (4-pin) AT/ATX power support ErP/EuP compliant
Power Consumption	12V@11.32A (4.6 GHz Intel® Core™ i7-8700 CPU with two 8 GB 2666 MHz DDR4 memory)
Operating Temperature	0°C ~ 60°C
Storage Temperature	-10°C ~ 70°C
Operating Humidity	5% ~ 95% (non-condensing)
Safety	CE, FCC

KINO-DH310 Mini-ITX Motherboard

Physical Specifications	
Dimensions	170 mm x 170 mm
Weight (GW/NW)	900 g / 400 g

Table 1-1: KINO-DH310 Specifications

Chapter

2

Packing List

KINO-DH310 Mini-ITX Motherboard

2.1 Anti-static Precautions



WARNING!

Static electricity can destroy certain electronics. Make sure to follow the ESD precautions to prevent damage to the product, and injury to the user.

Make sure to adhere to the following guidelines:

- **Wear an anti-static wristband:** Wearing an anti-static wristband can prevent electrostatic discharge.
- **Self-grounding:** Touch a grounded conductor every few minutes to discharge any excess static buildup.
- **Use an anti-static pad:** When configuring any circuit board, place it on an anti-static mat.
- **Only handle the edges of the PCB:** Don't touch the surface of the motherboard. Hold the motherboard by the edges when handling.

2.2 Unpacking Precautions

When the KINO-DH310 is unpacked, please do the following:

- Follow the anti-static guidelines above.
- Make sure the packing box is facing upwards when opening.
- Make sure all the packing list items are present.

2.3 Packing List



NOTE:

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the KINO-DH310 was purchased from or contact an IEI sales representative directly by sending an email to sales@ieiworld.com.

The KINO-DH310 is shipped with the following components:





Quantity	Item and Part Number	Image
1	KINO-DH310 single board computer	
1	SATA and power cable	
1	I/O shielding	
1	Quick installation guide	

Table 2-1: Packing List

KINO-DH310 Mini-ITX Motherboard

2.4 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
KB/MS PS/2 Y-cable (P/N: 32006-001100-201-RS)	
Dual USB cable (wo bracket) (P/N: 32001-008600-200-RS)	
RS-232 cable (P/N: 32205-002700-200-RS)	
RS-422/485 cable (P/N: 32205-003800-300-RS)	
High-performance LGA1155/1156 cooler kit (1U chassis compatible, 73W) (P/N: CF-115XA-R10)	
LGA1155/LGA1156 cooler kit (1U chassis compatible, 45W) (P/N: CF-115XC-R10)	
LGA1155/LGA1156 cooler kit (1U chassis compatible, 65W) (P/N: CF-115XD-R10)	
20-pin Infineon TPM 2.0 module, software management tool, firmware v5.5 (P/N: TPM-IN02-R20)	

Table 2-2: Optional Items

Chapter

3

Connectors

KINO-DH310 Mini-ITX Motherboard

3.1 Peripheral Interface Connectors

This chapter details all the peripheral interface connectors.

3.1.1 KINO-DH310 Layout

The figure below shows all the peripheral interface connectors.

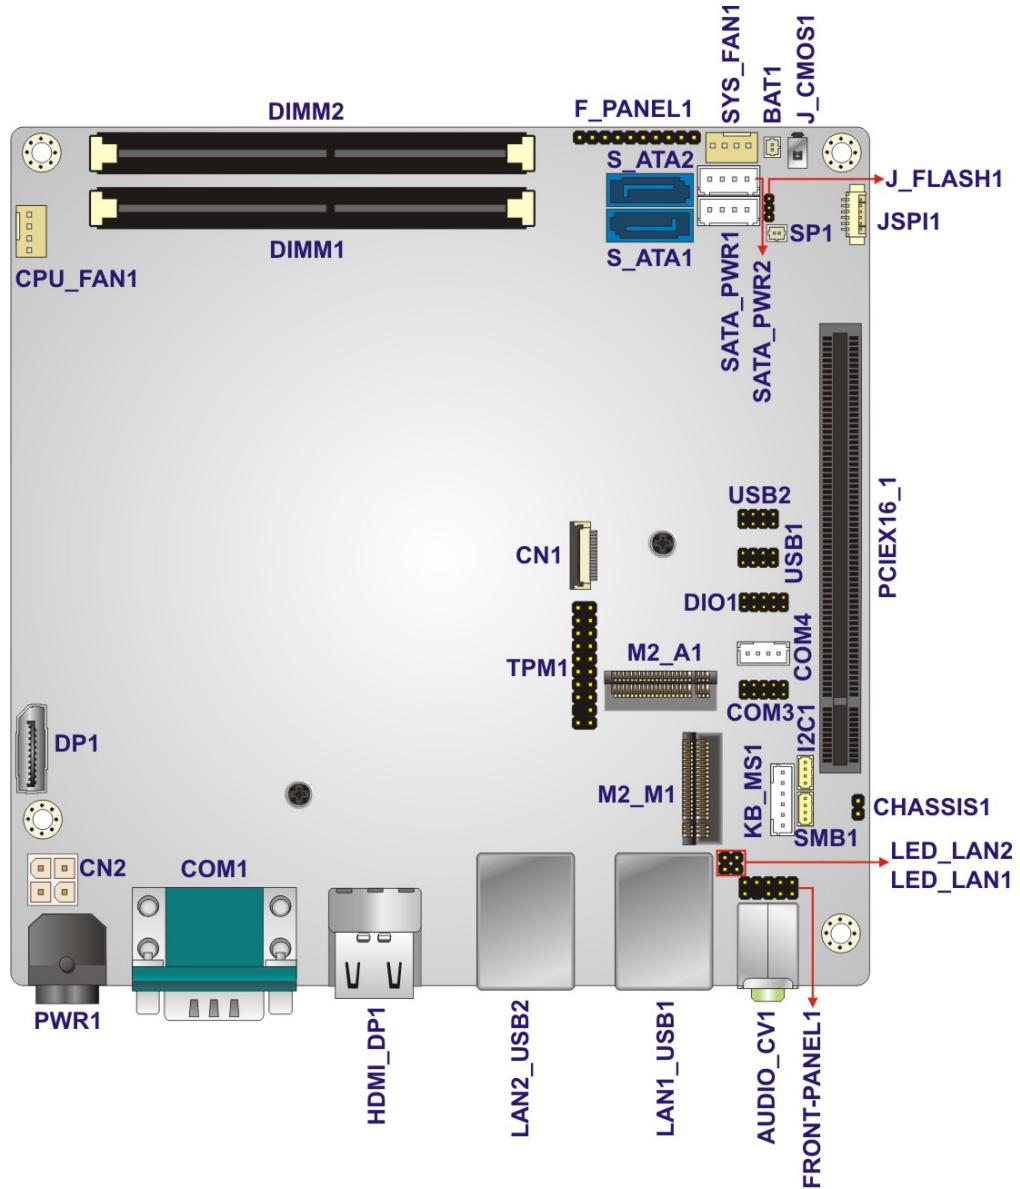


Figure 3-1: Peripheral Interface Connectors (Front Side)

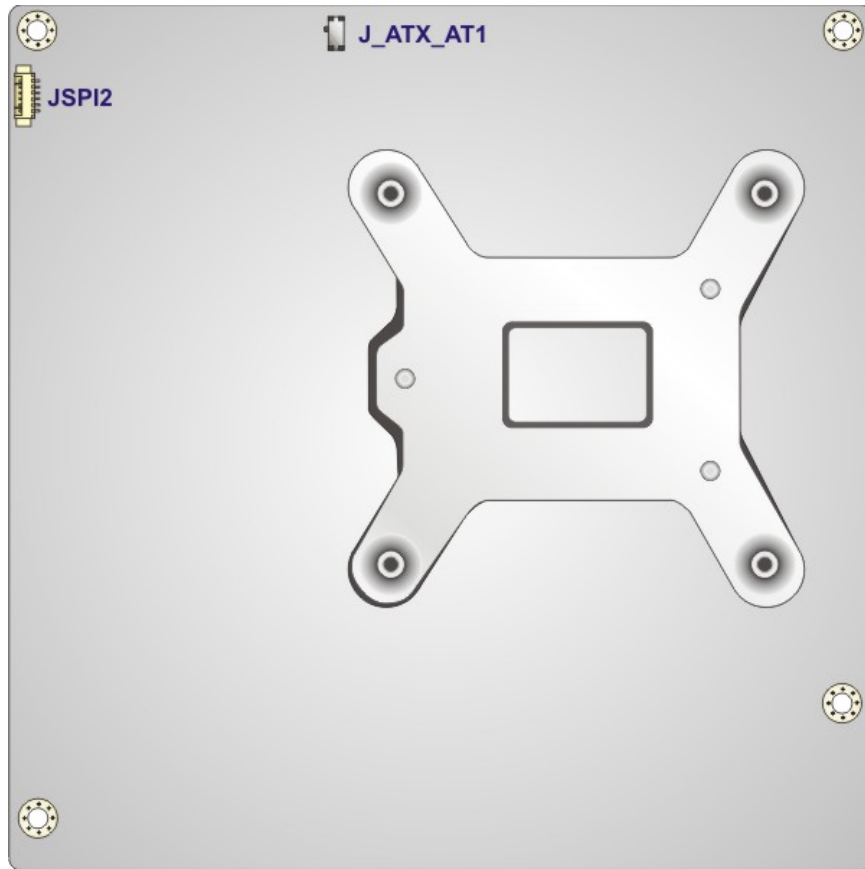


Figure 3-2: Peripheral Interface Connectors (Solder Side)

KINO-DH310 Mini-ITX Motherboard

3.1.1 Peripheral Interface Connectors

The table below lists all the connectors on the board.

Connector	Type	Label
Audio connector	10-pin header	FRONT-PANEL1
Battery connector	2-pin wafer	BAT1
Buzzer connector	2-pin wafer	SP1
Chassis intrusion connector	2-pin header	CHASSIS1
DDR4 SO-DIMM sockets	260-pin DDR4 SO-DIMM socket	DIMM1, DIMM2
Digital I/O connector	10-pin header	DIO1
DisplayPort connector (optional)	180° DisplayPort	DP1
EC debug connector	20-pin FPC	CN1
Fan connector (CPU)	4-pin wafer	CPU_FAN1
Fan connector (system)	4-pin wafer	SYS_FAN1
Front panel connector	10-pin header	F_PANEL1
I2C connector	4-pin wafer	I2C1
Internal power connector	4-pin Molex	CN2
Keyboard and mouse connector	6-pin wafer	KB_MS1
LAN LED connectors	2-pin header	LED_LAN1, LED_LAN2
M.2 slot, A-key	M.2 A-key slot	M2_A1
M.2 slot, M-key	M.2 M-key slot	M2_M1
PCIe x16 slot	PCIe x16 slot	PCIEX16_1
RS-232 serial ports	10-pin header	COM3
RS-422/485 serial ports	4-pin wafer	COM4
SATA 6Gb/s drive connector	7-pin SATA connector	S_ATA1, S_ATA2

Connector	Type	Label
SATA power connectors	4-pin wafer	SATA_PWR1, SATA_PWR2
SMBus connector	4-pin wafer	SMB1
SPI flash connector	6-pin wafer	JSPI1
SPI flash connector, EC	6-pin wafer	JSPI2
TPM connector	20-pin header	TPM1
USB 2.0 connectors	8-pin header	USB1, USB2

Table 3-1: Peripheral Interface Connectors

3.1.2 External Interface Panel Connectors

The table below lists the connectors on the external I/O panel.

Connector	Type	Label
Audio connector	Audio jacks	AUDIO_CV1
Ethernet and USB 3.2 Gen 1 ports	RJ-45 & USB 3.2 Gen 1 combo	LAN1_USB1, LAN2_USB2
HDMI connectors	HDMI	HDMI1
Power jack	4-pin DIN	PWR1
RS-232 serial ports	DB-9 male	COM1

Table 3-2: External Peripheral Connectors

KINO-DH310 Mini-ITX Motherboard

3.2 Internal Peripheral Connectors

The section describes all of the connectors on the KINO-DH310.

3.2.1 Audio Connector

- CN Label:** FRONT-PANEL1
- CN Type:** 10-pin header, p=2.54 mm
- CN Location:** See **Figure 3-3**
- CN Pinouts:** See **Table 3-3**

This connector connects to speakers, a microphone and an audio input.

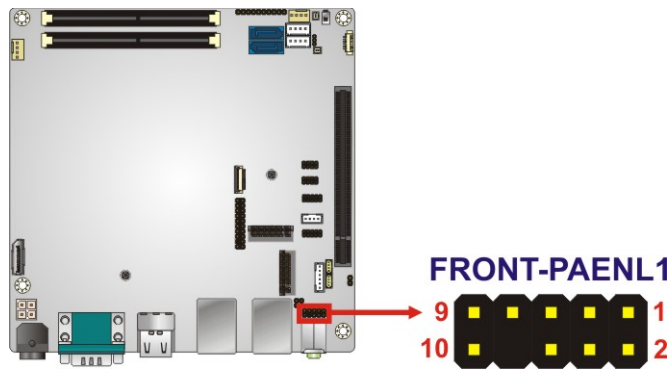


Figure 3-3: Audio Connector Location

Pin	Description	Pin	Description
1	MIC2-L	2	GND
3	MIC2-R	4	PRESENCE#
5	LINE2-R	6	MIC2-JD
7	FRONT-IO	8	NC
9	LINE2-L	10	LINE2-JD

Table 3-3: Audio Connector Pinouts

3.2.2 Battery Connector

**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

**NOTE:**

It is recommended to attach the RTC battery onto the system chassis in which the KINO-DH310 is installed.

CN Label:	BAT1
CN Type:	2-pin wafer, p=1.25 mm
CN Location:	See Figure 3-4
CN Pinouts:	See Table 3-4

A system battery is placed in the battery holder. The battery provides power to the system clock to retain the time when power is turned off.

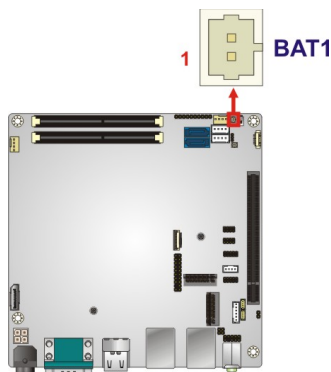


Figure 3-4: Battery Connector Location

KINO-DH310 Mini-ITX Motherboard

Pin	Description
1	Battery+
2	Ground

Table 3-4: Battery Connector Pinouts

3.2.1 Buzzer Connector



NOTE:

If you cannot find a good place to put a buzzer on the KINO-DH310, it is recommended to attach the buzzer onto the system chassis in which the KINO-DH310 is installed.

- CN Label:** SP1
- CN Type:** 2-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-5**
- CN Pinouts:** See **Table 3-5**

The buzzer connector is connected to a buzzer.

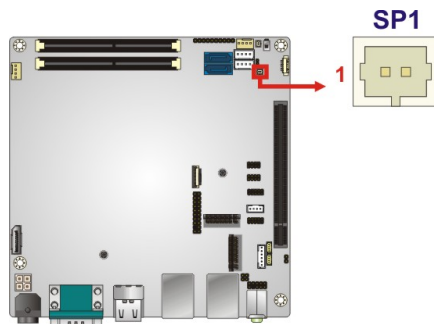


Figure 3-5: Buzzer Connector Location

Pin	Description
1	BU_PWR
2	PC_BEEP

Table 3-5: Buzzer Connector Pinouts

3.2.2 Chassis Intrusion Connector

- CN Label:** CHASSIS1
- CN Type:** 2-pin header, p=2.54 mm
- CN Location:** See **Figure 3-6**
- CN Pinouts:** See **Table 3-6**

The chassis intrusion connector is for a chassis intrusion detection sensor or switch that detects if a chassis component is removed or replaced.

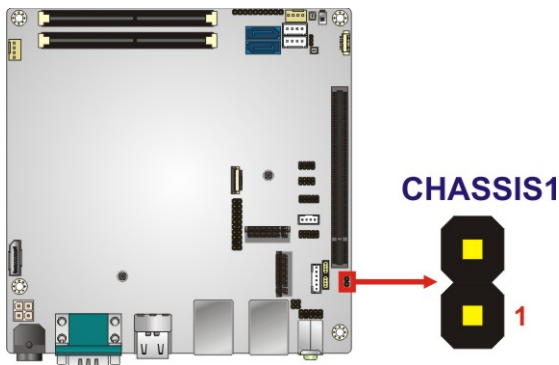


Figure 3-6: Chassis Intrusion Connector Location

Pin	Description
1	+3.3VSB
2	CHASSIS OPEN

Table 3-6: Chassis Intrusion Connector Pinouts

KINO-DH310 Mini-ITX Motherboard

3.2.3 DDR4 SO-DIMM Sockets



CAUTION:

For dual channel configuration, always install two identical memory modules that feature the same capacity, timings, voltage, number of ranks and the same brand.

CN Label:	DIMM1, DIMM2
CN Type:	260-pin DDR4 SO-DIMM socket
CN Location:	See Figure 3-7

The SO-DIMM slots are for installing the DDR4 SO-DIMMs.

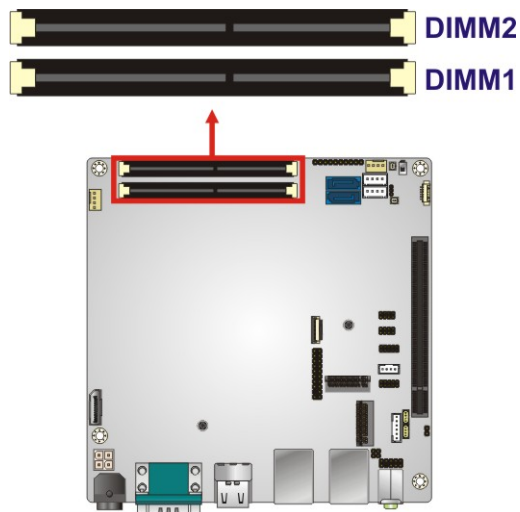


Figure 3-7: DDR4 SO-DIMM Socket Locations

3.2.4 Digital I/O Connector

- CN Label:** DIO1
- CN Type:** 10-pin header, p=2.00 mm
- CN Location:** See **Figure 3-8**
- CN Pinouts:** See **Table 3-7**

The digital I/O connector provides programmable input and output for external devices.

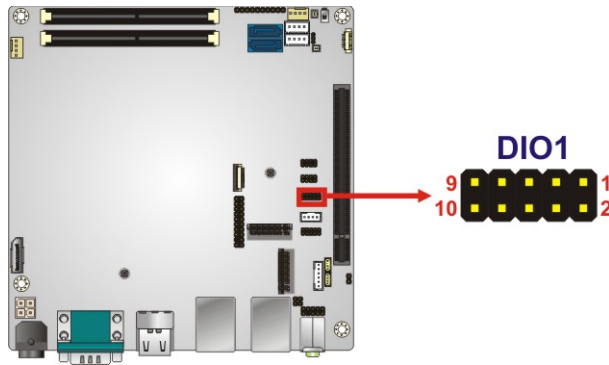


Figure 3-8: Digital I/O Connector Location

Pin	Description	Pin	Description
1	GND	2	VCC5V
3	Output 3	4	Output 2
5	Output 1	6	Output 0
7	Input 3	8	Input 2
9	Input 1	10	Input 0

Table 3-7: Digital I/O Connector Pinouts

KINO-DH310 Mini-ITX Motherboard

3.2.1 DisplayPort Connector (Optional)

- CN Label:** DP1
- CN Type:** 180° DisplayPort
- CN Location:** See **Figure 3-9**

This optional DisplayPort connector supports DisplayPort graphics interfaces.

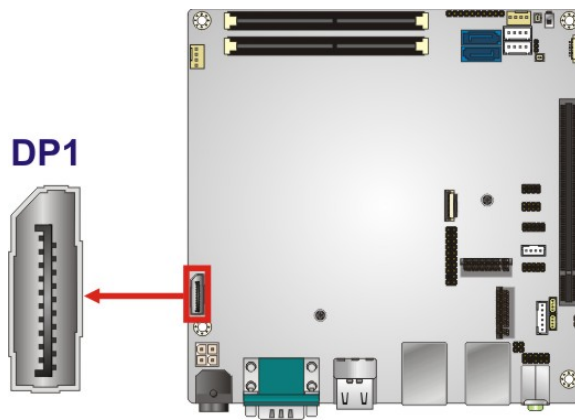


Figure 3-9: DisplayPort Connector Location

3.2.2 EC Debug Connector

- CN Label:** CN1
- CN Type:** 20-pin FPC, p=0.5 mm
- CN Location:** See **Figure 3-10**
- CN Pinouts:** See **Table 3-8**

The EC debug connector is used for EC debug.

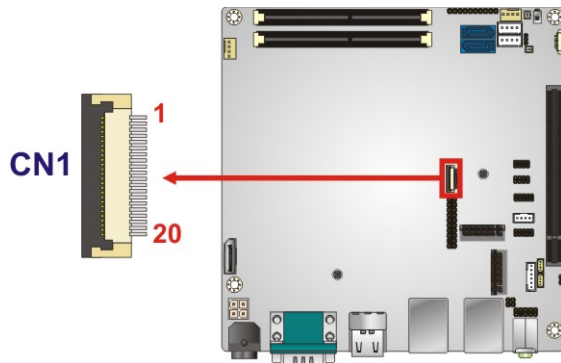


Figure 3-10: EC Debug Connector Location

Pin	Description	Pin	Description
1	EC_EPP_STB#	11	EC_EPP_BUSY
2	EC_EPP_PD0	12	EC_EPP_KSI5
3	EC_EPP_PD1	13	EC_EPP_KSI4
4	EC_EPP_PD2	14	EC_EPP_AFD#
5	EC_EPP_PD3	15	NC
6	EC_EPP_PD4	16	EC_EPP_INIT#
7	EC_EPP_PD5	17	EC_EPP_SLIN#
8	EC_EPP_PD6	18	GND
9	EC_EPP_PD7	19	GND
10	NC	20	GND

Table 3-8: EC Debug Connector Pinouts

KINO-DH310 Mini-ITX Motherboard

3.2.3 Fan Connector (CPU)

- CN Label:** CPU_FAN1
- CN Type:** 4-pin wafer, p=2.54 mm
- CN Location:** See **Figure 3-11**
- CN Pinouts:** See **Table 3-9**

The fan connector attaches to a CPU cooling fan.

CPU_FAN1

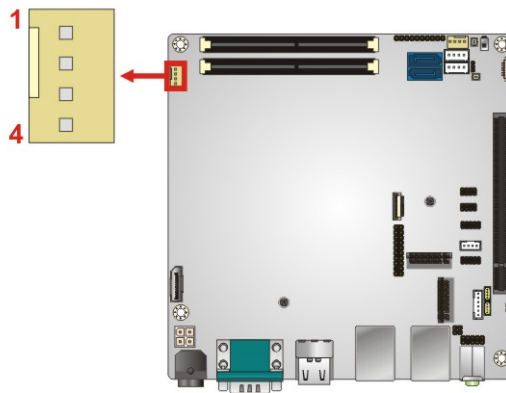


Figure 3-11: CPU Fan Connector Location

Pin	Description
1	GND
2	+12V
3	FANIO
4	PWM

Table 3-9: CPU Fan Connector Pinouts

3.2.4 Fan Connector (System)

- CN Label:** **SYS_FAN1**
- CN Type:** 4-pin wafer, p=2.54 mm
- CN Location:** See **Figure 3-12**
- CN Pinouts:** See **Table 3-10**

The fan connector attaches to a system cooling fan.

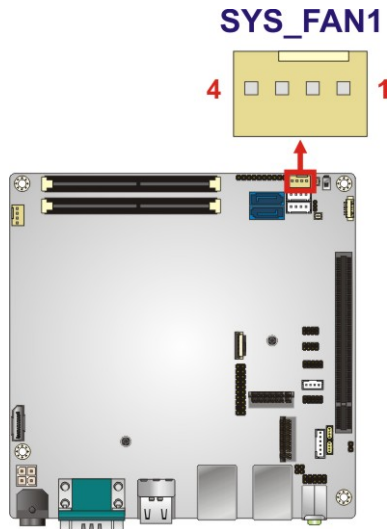


Figure 3-12: System Fan Connector Location

Pin	Description
1	GND
2	+12V
3	FANIO
4	PWM

Table 3-10: System Fan Connector Pinouts

KINO-DH310 Mini-ITX Motherboard

3.2.5 Front Panel Connector

- CN Label:** F_PANEL1
- CN Type:** 10-pin header, p=2.54 mm
- CN Location:** See **Figure 3-13**
- CN Pinouts:** See **Table 3-11**

The front panel connector connects to the indicator LEDs and buttons on the computer's front panel.

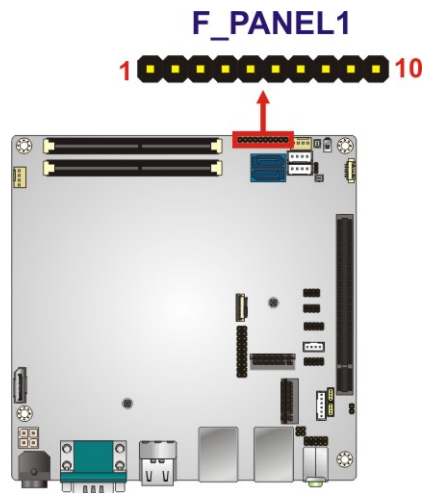


Figure 3-13: Front Panel Connector Location

Function	Pin	Description	Function	Pin	Description
	1	NC		6	PWR_LED+
Power Button	2	PWR_BTN+	Power LED	7	PWR_LED+
	3	PWR_BTN-		8	PWR_LED-
HDD LED	4	HDD_LED+		Reset	9
	5	HDD_LED-	10		RESET-

Table 3-11: Front Panel Connector Pinouts

3.2.6 I²C Connector

- CN Label:** I2C1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-14**
- CN Pinouts:** See **Table 3-12**

The I²C connector is used to connect I²C-bus devices to the motherboard.

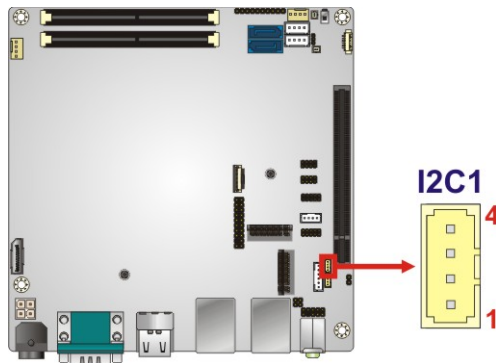


Figure 3-14: I²C Connector Location

Pin	Description
1	GND
2	I2C_DATA
3	I2C_CLK
4	+5V

Table 3-12: I²C Connector Pinouts

3.2.1 Internal Power Connector

- CN Label:** CN2
- CN Type:** 4-pin Molex power connector, p=4.2 mm
- CN Location:** See **Figure 3-15**
- CN Pinouts:** See **Table 3-13**

This connector provides power to the system.

KINO-DH310 Mini-ITX Motherboard

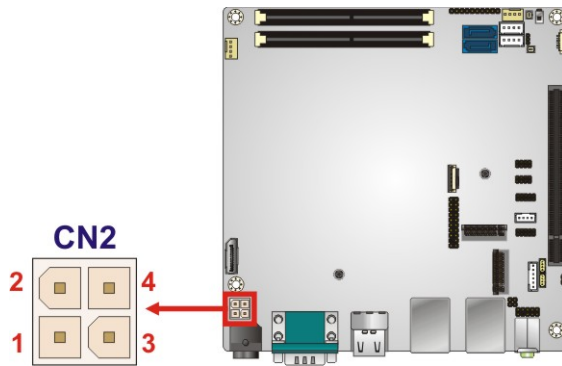


Figure 3-15: Internal Power Connector Pinout Location

Pin	Description	Pin	Description
1	GND	2	GND
3	+12V	4	+12V

Table 3-13: Internal Power Connector Pinouts

3.2.2 Keyboard and Mouse Connector

- CN Label:** KB_MS1
- CN Type:** 6-pin wafer, p=2.00 mm
- CN Location:** See Figure 3-16
- CN Pinouts:** See Table 3-14

The keyboard and mouse connector connects to a PS/2 Y-cable that can be connected to a PS/2 keyboard and mouse.

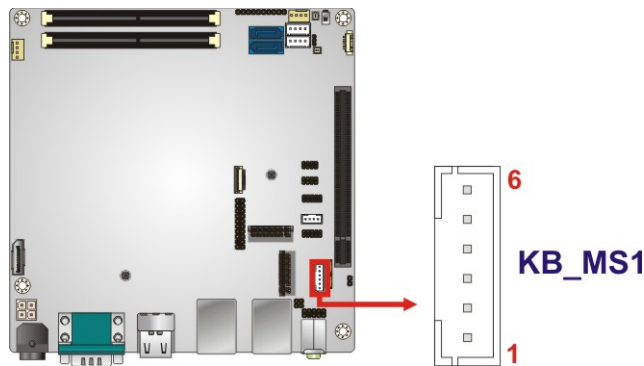


Figure 3-16: Keyboard and Mouse Connector Location

Pin	Description
1	VCC
2	Mouse Data
3	Mouse Clock
4	Keyboard Data
5	Keyboard Clock
6	GND

Table 3-14: Keyboard and Mouse Connector Pinouts

3.2.3 LAN LED Connectors

CN Label: LED_LAN1, LED_LAN2

CN Type: 2-pin header, p=2.54 mm

CN Location: See **Figure 3-17**

CN Pinouts: See **Table 3-15**

The LAN LED connectors are used to connect to the LAN LED indicators on the chassis to indicate users the link activities of the two LAN ports.

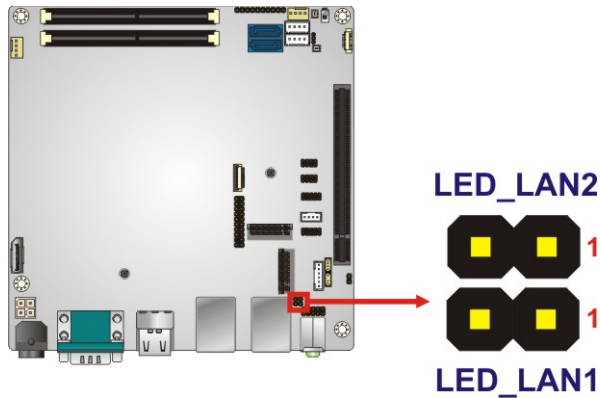


Figure 3-17: LAN LED Connector Locations

Pin	Description
1	+3.3V
2	LAN_LED_LINK#_ACT

Table 3-15: LAN LED Connector Pinouts

KINO-DH310 Mini-ITX Motherboard

3.2.1 M.2 Slot, A-key

- CN Label:** M2_A1
- CN Type:** M.2 A-key slot
- CN Location:** See **Figure 3-18**
- CN Pinouts:** See **Table 3-16**

The M.2 slot is keyed in the A position and accepts 2230 size of M.2 modules. The M.2 slot supports PCIe x1 and USB 2.0 signals.

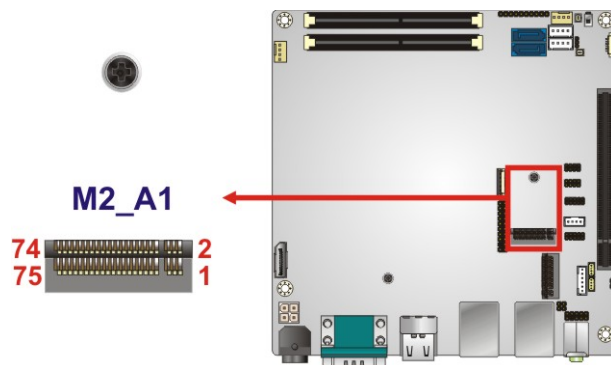


Figure 3-18: M.2 A-key Slot Location

Pin	Description	Pin	Description
1	GND	2	+3.3V
3	USB2_DP	4	+3.3V
5	USB2_DN	6	NC
7	GND	8	NC
9	NC	10	NC
11	NC	12	NC
13	NC	14	NC
15	NC	16	NC
17	NC	18	GND
19	NC	20	NC
21	NC	22	NC
23	GND	24	GND
25	NC	26	NC

Pin	Description	Pin	Description
27	NC	28	NC
29	GND	30	GND
31	NC	32	NC
33	GND	34	NC
35	PETP0	36	GND
37	PETN0	38	NC
39	GND	40	NC
41	PERP0	42	NC
43	PERN0	44	NC
45	GND	46	NC
47	PCIE_CLK+	48	NC
49	PCIE_CLK-	50	NC
51	GND	52	PLT_RST
53	NC	54	NC
55	PCIE_WAKE	56	W_DIS
57	GND	58	NC
59	NC	60	NC
61	NC	62	NC
63	GND	64	NC
65	NC	66	NC
67	NC	68	CLK_REQ
69	GND	70	+3.3V
71	NC	72	+3.3V
73	NC	74	+3.3V
75	GND		

Table 3-16: M.2 A-Key Slot Pinouts

KINO-DH310 Mini-ITX Motherboard

3.2.1 M.2 Slot, M-key

- CN Label:** M2_M1
- CN Type:** M.2 M-key slot
- CN Location:** See **Figure 3-19**
- CN Pinouts:** See **Table 3-17**

The M.2 slot is keyed in the M position and accepts 2280 size of M.2 modules. The M.2 slot supports PCIe x2 signal only.

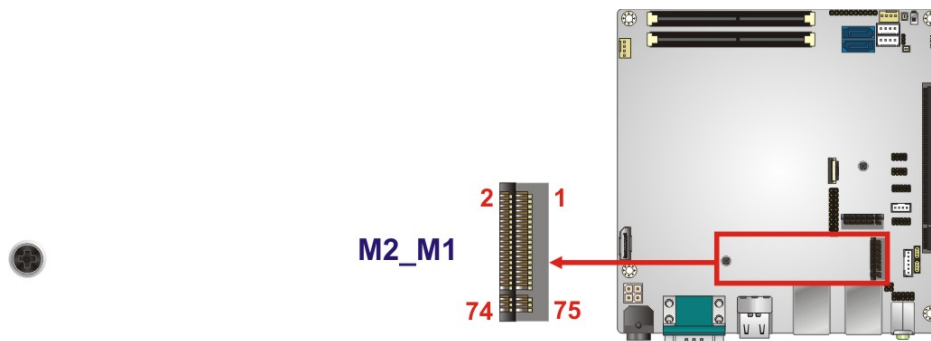


Figure 3-19: M.2 M-key Slot Location

Pin	Description	Pin	Description
1	GND	2	3.3V
3	GND	4	3.3V
5	N/A	6	NC
7	N/A	8	NC
9	GND	10	NC
11	N/A	12	3.3V
13	N/A	14	3.3V
15	GND	16	3.3V
17	N/A	18	3.3V
19	N/A	20	NC
21	GND	22	NC
23	N/A	24	NC
25	N/A	26	NC

Pin	Description	Pin	Description
27	GND	28	NC
29	PERn1	30	NC
31	PERp1	32	NC
33	GND	34	NC
35	PETn1	36	NC
37	PETp1	38	NC
39	GND	40	NC
41	PERn0	42	NC
43	PERp0	44	NC
45	GND	46	NC
47	PETn0	48	NC
49	PETp0	50	NC
51	GND	52	NC
53	CLKN	54	NC
55	CLKP	56	NC
57	GND	58	NC
59	NC	60	NC
61	NC	62	NC
63	NC	64	NC
65	NC	66	NC
67	NC	68	NC
69	PEDET	70	3.3V
71	GND	72	3.3V
73	GND	74	3.3V
75	GND		

Table 3-17: M.2 M-Key Slot Pinouts

KINO-DH310 Mini-ITX Motherboard

3.2.2 PCIe x16 Slot

CN Label:	PCIEX16_1
CN Type:	PCIe x16 slot
CN Location:	See Figure 3-20

The PCIe x16 expansion card slot is for PCIe x16 expansion card.

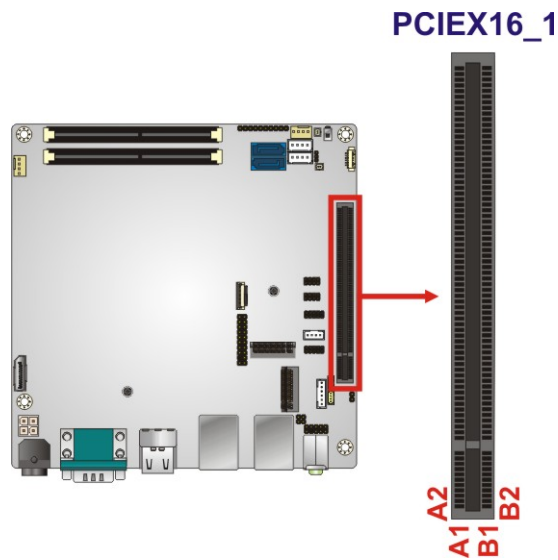


Figure 3-20: PCIe x16 Slot Location

3.2.3 RS-232 Serial Port Connector

CN Label:	COM3
CN Type:	10-pin header, p=2.00 mm
CN Location:	See Figure 3-21
CN Pinouts:	See Table 3-18

Each of these connectors provides RS-232 connections.

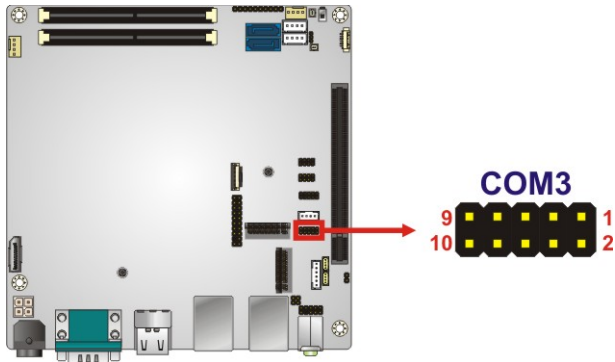


Figure 3-21: RS-232 Serial Port Connector Location

Pin	Description	Pin	Description
1	DCD	2	DSR
3	RX	4	RTS
5	TX	6	CTS
7	DTR	8	RI
9	GND	10	GND

Table 3-18: RS-232 Serial Port Connector Pinouts

3.2.1 RS-422/485 Serial Port Connector

- CN Label:** COM4
- CN Type:** 4-pin wafer, p=2.00 mm
- CN Location:** See **Figure 3-22**
- CN Pinouts:** See **Table 3-19**

This connector provides RS-422 or RS-485 communications.

KINO-DH310 Mini-ITX Motherboard

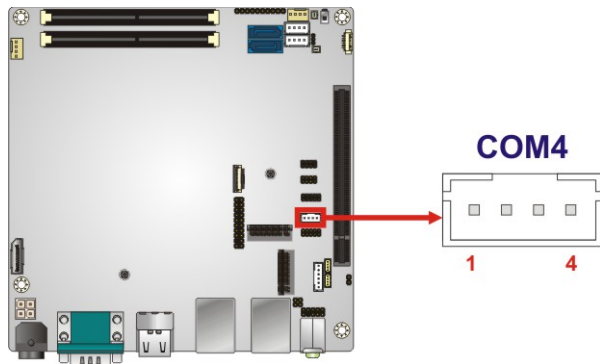


Figure 3-22: RS-422/485 Connector Location

Pin	Description
1	RXD422-
2	RXD422+
3	TXD422+/TXD485+
4	TXD422-/TXD485-

Table 3-19: RS-422/485 Connector Pinouts

Use the optional RS-422/485 cable to connect to a serial device. The pinouts of the DB-9 connector are listed below.

RS-422 Pinouts	RS-485 Pinouts

Table 3-20: DB-9 RS-422/485 Pinouts

3.2.2 SATA 6Gb/s Drive Connectors

- CN Label:** S_ATA1, S_ATA2
- CN Type:** 7-pin SATA drive connector
- CN Location:** See **Figure 3-23**
- CN Pinouts:** See **Table 3-21**

The SATA drive connectors can be connected to SATA drives and supports up to 6Gb/s data transfer rate.

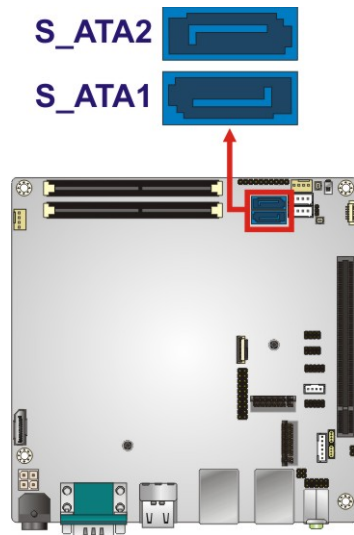


Figure 3-23: SATA 6Gb/s Drive Connector Locations

Pin	Description	Pin	Description
1	GND	2	SATA_TXP
3	SATA_TXN	4	GND
5	SATA_RXN	6	SATA_RXP
7	GND		

Table 3-21: SATA 6Gb/s Drive Connector Pinouts

KINO-DH310 Mini-ITX Motherboard

3.2.1 SATA Power Connectors

CN Label: SATA_PWR1, SATA_PWR2

CN Type: 4-pin wafer

CN Location: See **Figure 3-24**

CN Pinouts: See **Table 3-22**

Use the SATA Power Connector to connect to SATA device power connections.

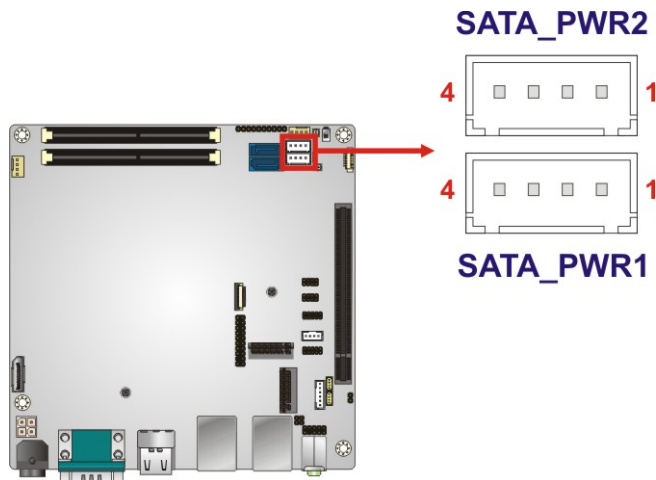


Figure 3-24: SATA Power Connector Locations

Pin	Description
1	+12V
2	GND
3	GND
4	+5V

Table 3-22: SATA Power Connector Pinouts

3.2.2 SMBus Connector

- CN Label:** SMB1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-25**
- CN Pinouts:** See **Table 3-23**

The SMBus (System Management Bus) connector provides low-speed system management communications.

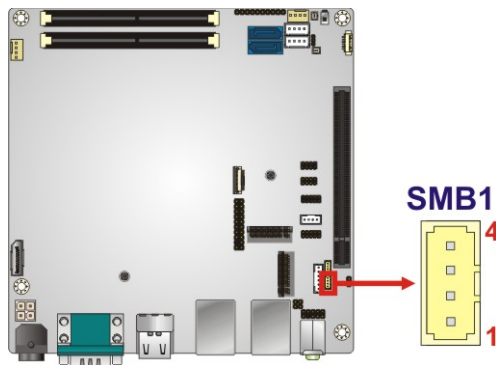


Figure 3-25: SMBus Connector Location

Pin	Description
1	GND
2	SMB_DATA
3	SMB_CLK
4	+5V

Table 3-23: SMBus Connector Pinouts

KINO-DH310 Mini-ITX Motherboard

3.2.3 SPI Flash Connector

- CN Label:** JSPI1
- CN Type:** 6-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-26**
- CN Pinouts:** See **Table 3-24**

The SPI flash connector is used to flash the SPI ROM.

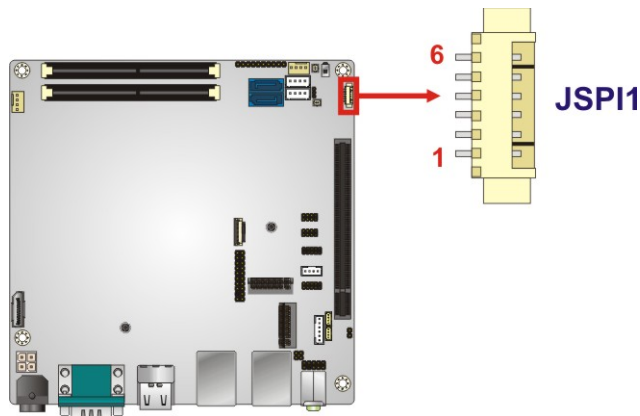


Figure 3-26: SPI Flash Connector Location

Pin	Description
1	+3.3V
2	SPI_CS
3	SPI_SO
4	SPI_CLK
5	SPI_SI
6	GND

Table 3-24: SPI Flash Connector Pinouts

3.2.4 SPI Flash Connector, EC

- CN Label:** JSPI2
- CN Type:** 6-pin wafer, p=1.25 mm
- CN Location:** See **Figure 3-27**
- CN Pinouts:** See **Table 3-25**

The SPI flash connector is used to flash the EC ROM.

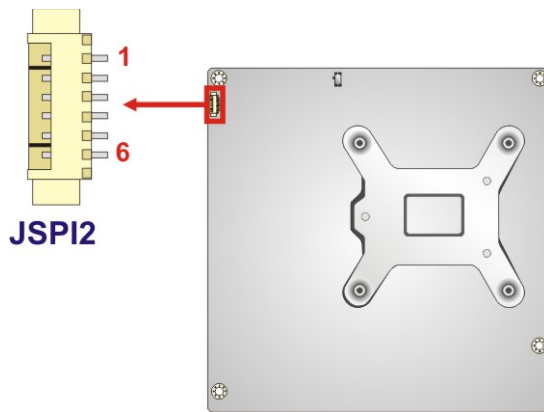


Figure 3-27: SPI EC Flash Connector Location

Pin	Description
1	+3.3V
2	SPI_CS_EC
3	SPI_SO_EC
4	SPI_CLK_EC
5	SPI_SI_EC
6	GND

Table 3-25: SPI EC Flash Connector Pinouts

KINO-DH310 Mini-ITX Motherboard

3.2.1 TPM Connector

- CN Label:** TPM1
- CN Type:** 20-pin header, p=2.54 mm
- CN Location:** See **Figure 3-28**
- CN Pinouts:** See **Table 3-26**

The TPM connector connects to a TPM module.

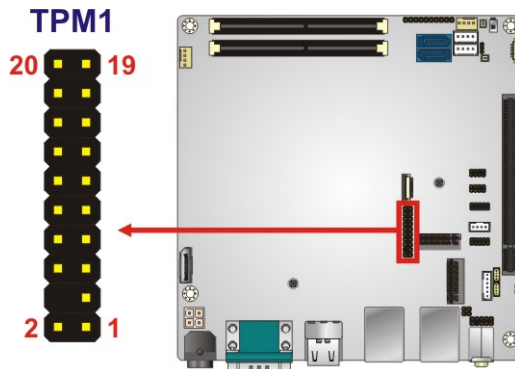


Figure 3-28: TPM Connector Location

Pin	Description	Pin	Description
1	LCLK	2	GND
3	LFRAME#	4	KEY
5	LRERST#	6	+5V
7	LAD3	8	LAD2
9	+3.3V	10	LAD1
11	LAD0	12	GND
13	SCL	14	SDA
15	SB3V	16	SERIRQ
17	GND	18	GLKRUN#
19	LPCPD#	20	LDRQ#

Table 3-26: TPM Connector Pinouts

3.2.2 USB 2.0 Connectors

- CN Label:** USB1, USB2
- CN Type:** 8-pin header, p=2.00 mm
- CN Location:** See **Figure 3-29**
- CN Pinouts:** See **Table 3-27**

The USB 2.0 connectors connect to USB 2.0/1.1 devices. Each pin header provides two USB 2.0 ports.

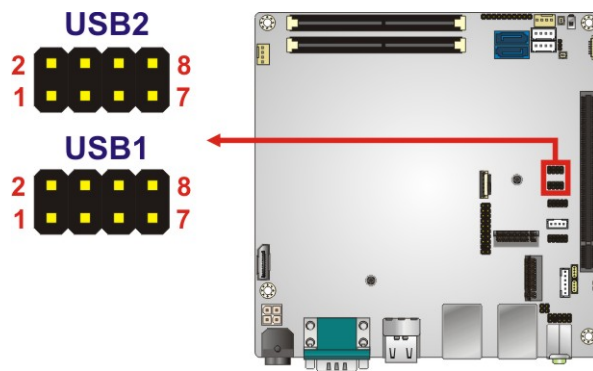


Figure 3-29: USB 2.0 Connector Locations

Pin	Description	Pin	Description
1	VCC	2	GND
3	DATA-	4	DATA+
5	DATA+	6	DATA-
7	GND	8	VCC

Table 3-27: USB 2.0 Connector Pinouts

KINO-DH310 Mini-ITX Motherboard

3.3 External Peripheral Interface Connector Panel

The figure below shows the external peripheral interface connector (EPIC) panel. The EPIC panel consists of the following:

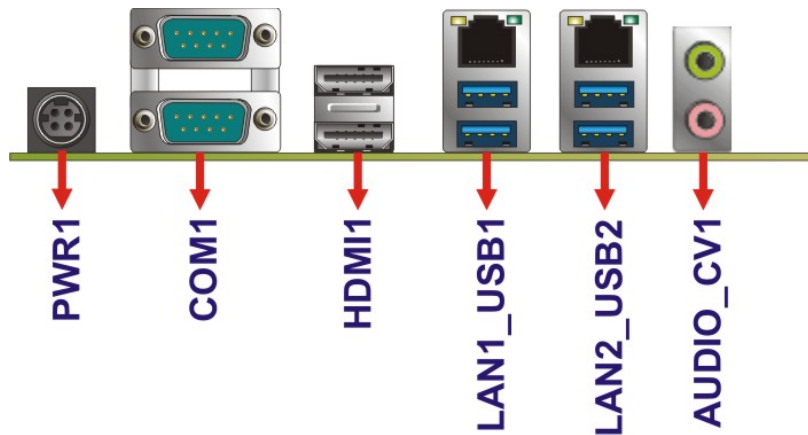


Figure 3-30: External Peripheral Interface Connector

3.3.1 Audio Connector

CN Label: AUDIO_CV1
CN Type: Audio jack
CN Location: See Figure 3-30

The audio jacks connect to external audio devices.

- **Line Out port (Lime):** Connects to a headphone or a speaker. With multi-channel configurations, this port can also connect to front speakers.
- **Microphone (Pink):** Connects a microphone.



Figure 3-31: Audio Connector

3.3.2 Ethernet and USB 3.2 Gen 1 Connectors

- CN Label:** LAN1_USB1, LAN2_USB2
- CN Type:** RJ-45 and USB 3.2 Gen 1 combo
- CN Location:** See **Figure 3-30**
- CN Pinouts:** See **Table 3-28** and **Table 3-29**

There are four external USB 3.2 Gen 1 (5Gb/s) connectors on the KINO-DH310.

Pin	Description	Pin	Description
1	VCC	10	VCC
2	USB_DATA-	11	USB_DATA-
3	USB_DATA+	12	USB_DATA+
4	GND	13	GND
5	USB3_RX-	14	USB3_RX-
6	USB3_RX+	15	USB3_RX+
7	GND	16	GND
8	USB3_TX-	17	USB3_TX-
9	USB3_TX+	18	USB3_TX+

Table 3-28: USB 3.2 Gen 1 Port Pinouts

Each LAN connector connects to a local network.

Pin	Description	Pin	Description
1	LAN_MDI0P	5	LAN_MDI2P
2	LAN_MDI0N	6	LAN_MDI2N
3	LAN_MDI1P	7	LAN_MDI3P
4	LAN_MDI1N	8	LAN_MDI3N

Table 3-29: LAN Pinouts

KINO-DH310 Mini-ITX Motherboard

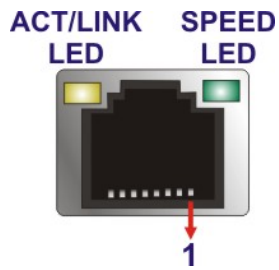


Figure 3-32: LAN Connector

3.3.1 HDMI Connectors

CN Label:	HDMI1
CN Type:	HDMI
CN Location:	See Figure 3-30
CN Pinouts:	See Table 3-30

The KINO-DH310 has two HDMI connectors - HDMI Port B (up) and HDMI Port C (down). Each HDMI connector can connect to an HDMI device.

Pin	Description	Pin	Description
1	HDMI_DATA2	2	GND
3	HDMI_DATA2#	4	HDMI_DATA1
5	GND	6	HDMI_DATA1#
7	HDMI_DATA0	8	GND
9	HDMI_DATA0#	10	HDMI_CLK
11	GND	12	HDMI_CLK#
13	N/C	14	N/C
15	HDMI_SCL	16	HDMI_SDA
17	GND	18	+5V
19	HDMI_HPD	20	HDMI_GND
21	HDMI_GND	22	HDMI_GND
23	HDMI_GND		

Table 3-30: HDMI Connector Pinouts

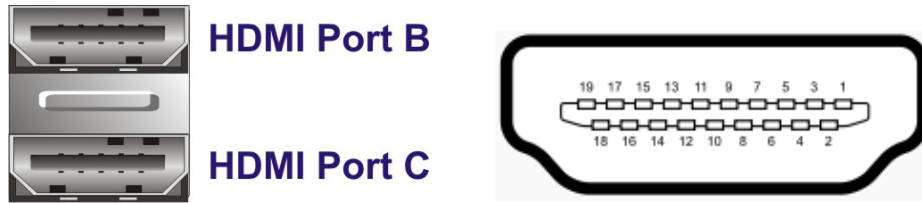


Figure 3-33: HDMI Connector

3.3.1 RS-232 Connectors

- CN Label:** COM1
- CN Type:** DB-9 male
- CN Location:** See **Figure 3-30**
- CN Pinouts:** See **Table 3-31**

The COM connector (COM1) connects to a serial device that supports RS-232 communication.

Pin	Description	Pin	Description
1	DCD	6	DSR
2	RX	7	RTS
3	TX	8	CTS
4	DTR	9	RI
5	GND		

Table 3-31: COM1 Connector Pinouts



Figure 3-34: COM1 Serial Port Pinout Locations

KINO-DH310 Mini-ITX Motherboard

3.3.1 Power Connector (Power Adapter)

CN Label:	PWR1
CN Type:	4-pin Mini-DIN
CN Location:	See Figure 3-30
CN Pinouts:	See Figure 3-35

The external power connector supports power adapter.

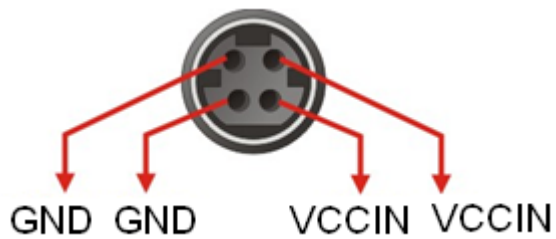


Figure 3-35: 4-pin Power Mini-DIN Connector

Chapter

4

Installation

KINO-DH310 Mini-ITX Motherboard

4.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the KINO-DH310 may result in permanent damage to the KINO-DH310 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the KINO-DH310. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the KINO-DH310 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:**- Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the KINO-DH310, place it on an anti-static pad. This reduces the possibility of ESD damaging the KINO-DH310.
- **Only handle the edges of the PCB:-:** When handling the PCB, hold the PCB by the edges.

4.2 Installation Considerations



NOTE:

The following installation notices and installation considerations should be read and understood before installation. All installation notices must be strictly adhered to. Failing to adhere to these precautions may lead to severe damage and injury to the person performing the installation.

**WARNING:**

The installation instructions described in this manual should be carefully followed in order to prevent damage to the components and injury to the user.

Before and during the installation please **DO** the following:

- Read the user manual:
 - The user manual provides a complete description of the KINO-DH310 installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
 - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the KINO-DH310 on an anti-static pad:
 - When installing or configuring the motherboard, place it on an anti-static pad. This helps to prevent potential ESD damage.
- Turn all power to the KINO-DH310 off:
 - When working with the KINO-DH310, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the KINO-DH310, **DO NOT**:

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

KINO-DH310 Mini-ITX Motherboard

4.3 Socket LGA1151 CPU Installation



WARNING:

CPUs are expensive and sensitive components. When installing the CPU please be careful not to damage it in anyway. Make sure the CPU is installed properly and ensure the correct cooling kit is properly installed.

DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

To install the CPU, follow the steps below.

Step 1: Disengage the load lever by pressing the lever down and slightly outward to clear the retention tab. Fully open the lever. See **Figure 4-1**.

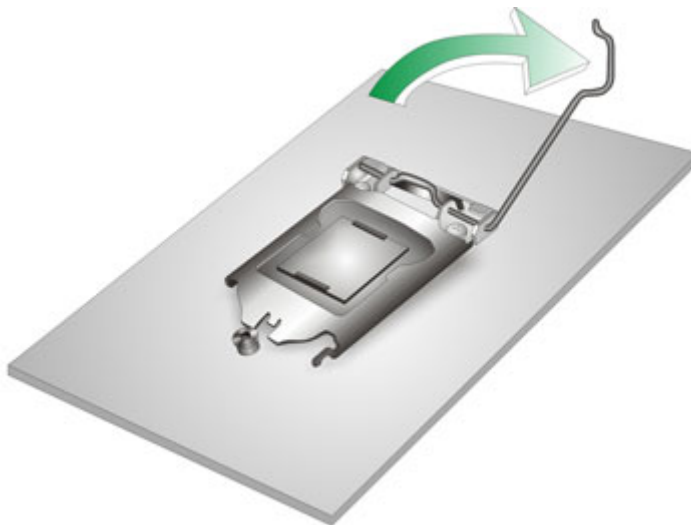


Figure 4-1: Disengage the CPU Socket Load Lever

Step 2: Open the socket and remove the protective cover. The black protective cover can be removed by pulling up on the tab labeled "Remove". See **Figure 4-2**.

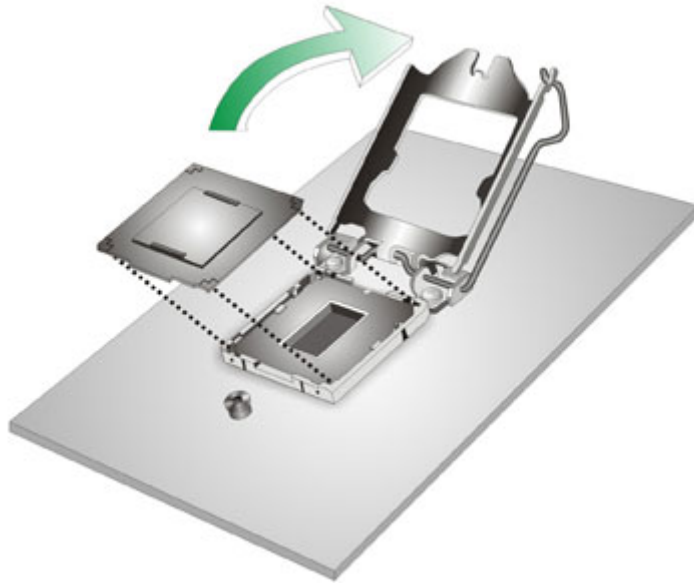


Figure 4-2: Remove Protective Cover

- Step 3: Inspect the CPU socket.** Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.
- Step 4: Orientate the CPU properly.** The contact array should be facing the CPU socket.



WARNING:

DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

-
- Step 5: Correctly position the CPU.** Match the Pin 1 mark with the cut edge on the CPU socket.
- Step 6: Align the CPU pins.** Locate pin 1 and the two orientation notches on the CPU. Carefully match the two orientation notches on the CPU with the socket alignment keys.

KINO-DH310 Mini-ITX Motherboard

Step 7: Insert the CPU. Gently insert the CPU into the socket. If the CPU pins are properly aligned, the CPU should slide into the CPU socket smoothly. See **Figure 4-3**.

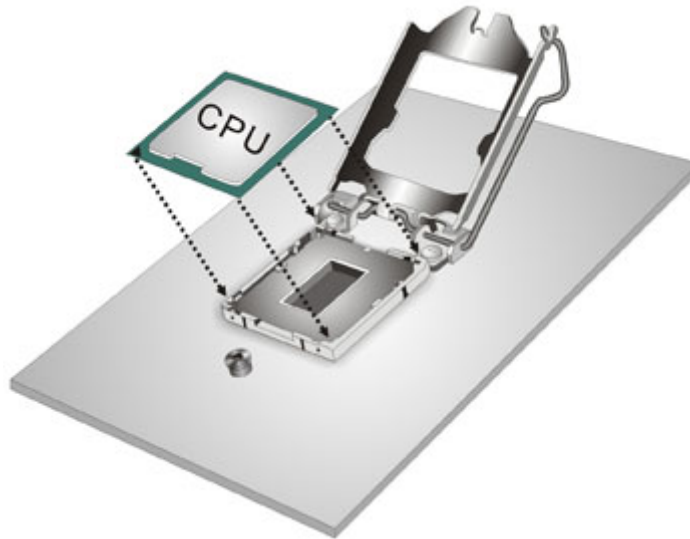


Figure 4-3: Insert the Socket LGA1151 CPU

Step 8: Close the CPU socket. Close the load plate and pull the load lever back a little to have the load plate be able to secure to the knob. Engage the load lever by pushing it back to its original position (**Figure 4-4**). There will be some resistance, but will not require extreme pressure.

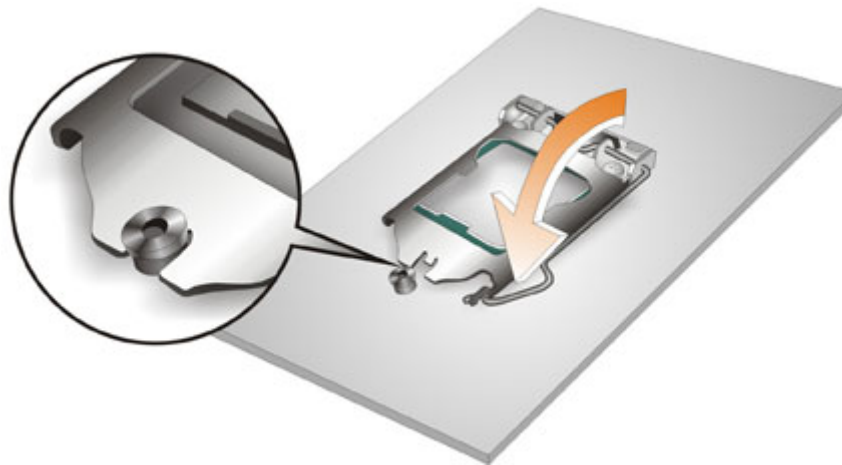


Figure 4-4: Close the Socket LGA1151

4.4 Socket LGA1151 Cooling Kit Installation

**WARNING:**

DO NOT attempt to install a push-pin cooling fan.

The pre-installed support bracket prevents the board from bending and is ONLY compatible with captive screw type cooling fans.

The cooling kit can be bought from IEI. The cooling kit has a heat sink and fan.

**WARNING:**

Do not wipe off (accidentally or otherwise) the pre-sprayed layer of thermal paste on the bottom of the heat sink. The thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

To install the cooling kit, follow the instructions below.

Step 1: A cooling kit bracket is pre-installed on the rear of the motherboard. See **Figure 4-5**.

KINO-DH310 Mini-ITX Motherboard

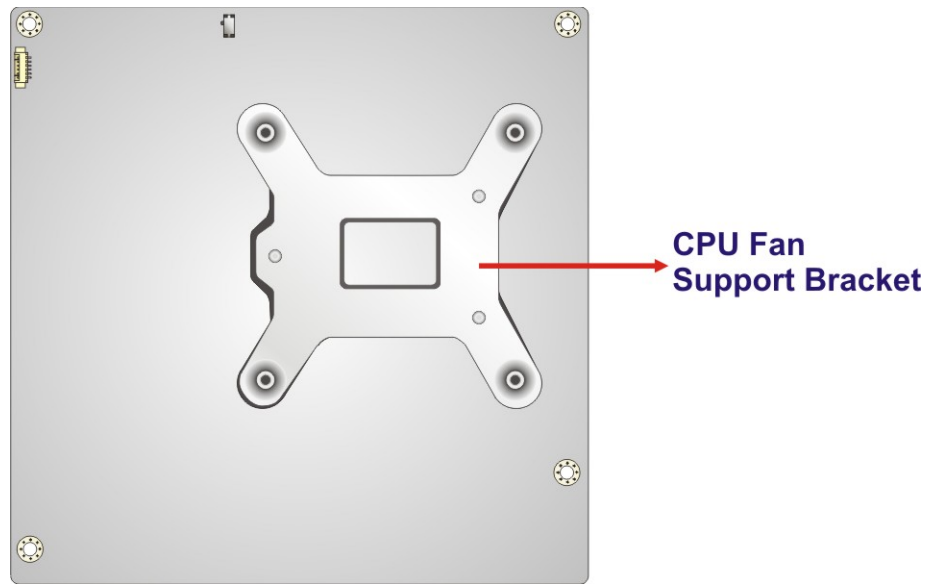


Figure 4-5: Cooling Kit Support Bracket

- Step 2:** Place the cooling kit onto the socket LGA1151 CPU. Make sure the CPU cable can be properly routed when the cooling kit is installed.
- Step 3:** Mount the cooling kit. Gently place the cooling kit on top of the CPU. Make sure the four threaded screws on the corners of the cooling kit properly pass through the holes of the cooling kit bracket.
- Step 4:** Tighten the screws. Use a screwdriver to tighten the four screws. In a diagonal pattern, tighten each screw a few turns then move to the next one, until they are all secured. Do not overtighten the screws.
- Step 5:** Connect the fan cable. Connect the cooling kit fan cable to the CPU fan connector on the KINO-DH310. Carefully route the cable and avoid heat generating chips and fan blades.

4.5 SO-DIMM Installation



CAUTION:

For dual channel configuration, always install two identical memory modules that feature the same capacity, timings, voltage, number of ranks and the same brand.

To install a SO-DIMM, please follow the steps below and refer to Figure 4-6.

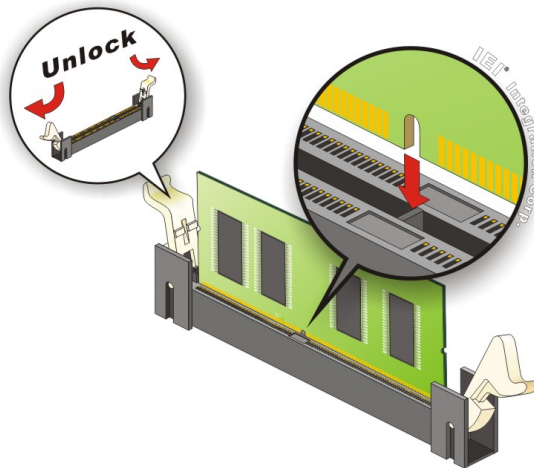


Figure 4-6: SO-DIMM Installation (DDR4)

- Step 1: Open the SO-DIMM socket handles.** Open the two handles outwards as far as they can. See Figure 4-6.
- Step 2: Align the SO-DIMM with the socket.** Align the SO-DIMM so the notch on the memory lines up with the notch on the memory socket. See Figure 4-6.
- Step 3: Insert the SO-DIMM.** Once aligned, press down until the SO-DIMM is properly seated. Clip the two handles into place. See Figure 4-6.
- Step 4: Removing a SO-DIMM.** To remove a SO-DIMM, push both handles outward. The memory module is ejected by a mechanism in the socket.

KINO-DH310 Mini-ITX Motherboard

4.6 M.2 Module Installation

To install an M.2 module, please follow the steps below.

Step 1: Locate the M.2 module slot. See **Chapter 3**. Remove the on-board retention screw.

Step 2: Line up the notch on the module with the notch on the slot. Slide the M.2 module into the socket at an angle of about 20° (**Figure 4-7**).

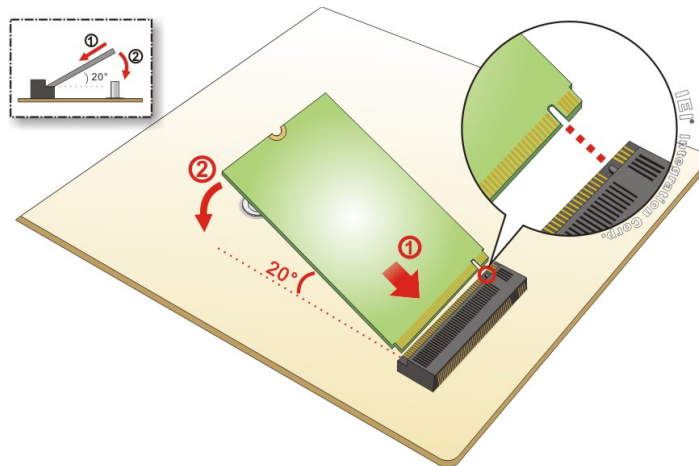


Figure 4-7: Inserting the M.2 Module into the Slot at an Angle

Step 3: Secure the M.2 module with an M2*3 retention screw (**Figure 4-8**).

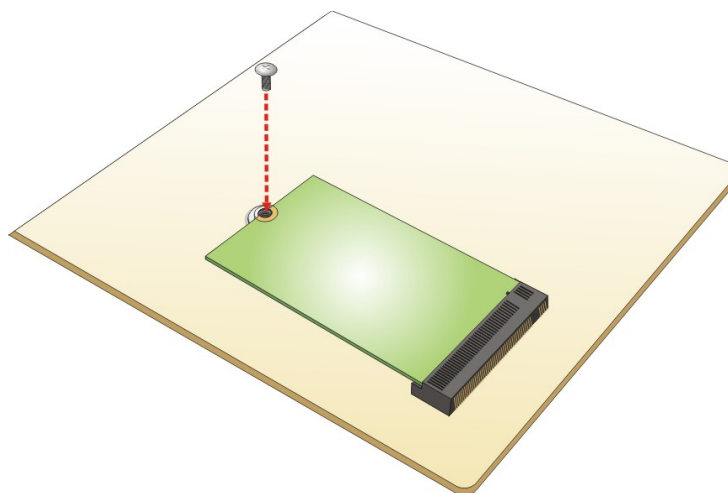


Figure 4-8: Securing the M.2 Module

4.7 System Configuration

The system configuration should be performed before installation.

4.7.1 AT/ATX Power Mode Setting

The AT and ATX power mode selection is made through the AT/ATX power mode switch which is shown in **Figure 4-9**.

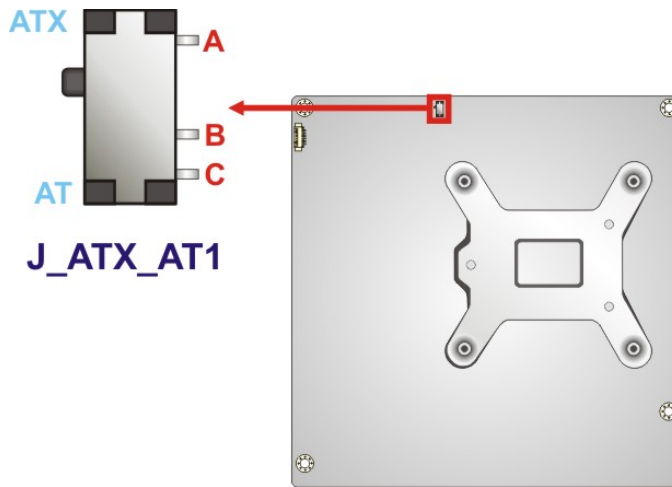


Figure 4-9: AT/ATX Power Mode Switch Location

Setting	Description
Short A-B	ATX power mode (default)
Short B-C	AT power mode

Table 4-1: AT/ATX Power Mode Switch Settings

4.7.2 Clear CMOS Button

To reset the BIOS, remove the on-board battery and press the clear CMOS button for three seconds or more. The clear CMOS button location is shown in **Figure 4-10**.

KINO-DH310 Mini-ITX Motherboard

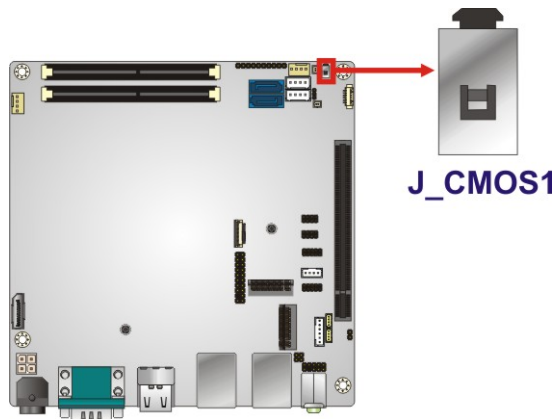


Figure 4-10: Clear CMOS Button Location

4.7.3 Flash Descriptor Security Override Jumper

The flash descriptor security override jumper (J_FLASH1) allows to enable or disable the ME firmware update. Refer to **Table 4-2** and **Figure 4-11** for the jumper location and settings.

Setting	Description
Short 1-2	Disabled
Short 2-3	Enabled

Table 4-2: Flash Descriptor Security Override Jumper Settings

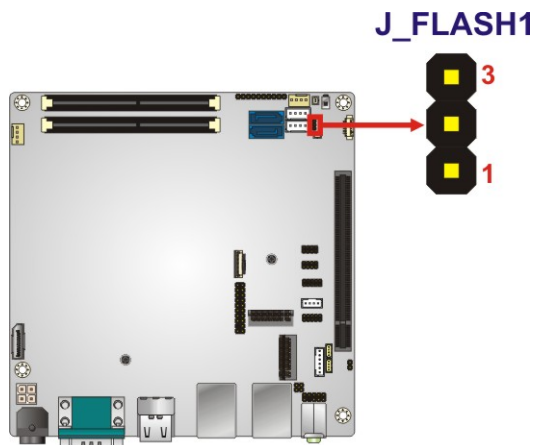


Figure 4-11: Flash Descriptor Security Override Jumper Location

To update the ME firmware, please follow the steps below.

- Step 1:** Before turning on the system power, short pin 2-3 of the flash descriptor security override jumper.
- Step 2:** Update the BIOS and ME firmware, and then turn off the system power.
- Step 3:** Remove the metal clip on the flash descriptor security override jumper or return to its default setting (short pin 1-2).
- Step 4:** Restart the system. The system will reboot 2 ~ 3 times to complete the ME firmware update.

4.7.4 USB Power Selection

The USB power selection is made through the BIOS menu in “Chipset → PCH-IO Configuration”. Use the **USB Power SW1** and the **USB Power SW2** BIOS options to configure the correspondent USB ports (see **Table 4-3**) and refer to **Table 4-4** to select the USB power source.

BIOS Options	Configured USB Ports
USB Power SW1	LAN1_USB1 (external USB 3.2 Gen 1 ports) LAN2_USB2 (external USB 3.2 Gen 1 ports)
USB Power SW2	USB1 (internal USB 2.0 ports) USB2 (internal USB 2.0 ports)

Table 4-3: BIOS Options and Configured USB Ports

Options	Description
+5V DUAL	+5V dual (default)
+5V	+5V

Table 4-4: USB Power Source Setup

Please refer to **Section 5.4.2** for BIOS setup.

KINO-DH310 Mini-ITX Motherboard

4.8 Internal Peripheral Device Connections

This section outlines the installation of peripheral devices to the onboard connectors.

4.8.1 SATA Drive Connection

The KINO-DH310 is shipped with a SATA drive cable. To connect the SATA drive to the connector, please follow the steps below.

Step 1: Locate the **SATA connector** and the **SATA power connector**. The locations of the connectors are shown in **Chapter 3**.

Step 2: **Insert the cable connector.** Insert the cable connector into the on-board SATA drive connector and the SATA power connector. See **Figure 4-12**.

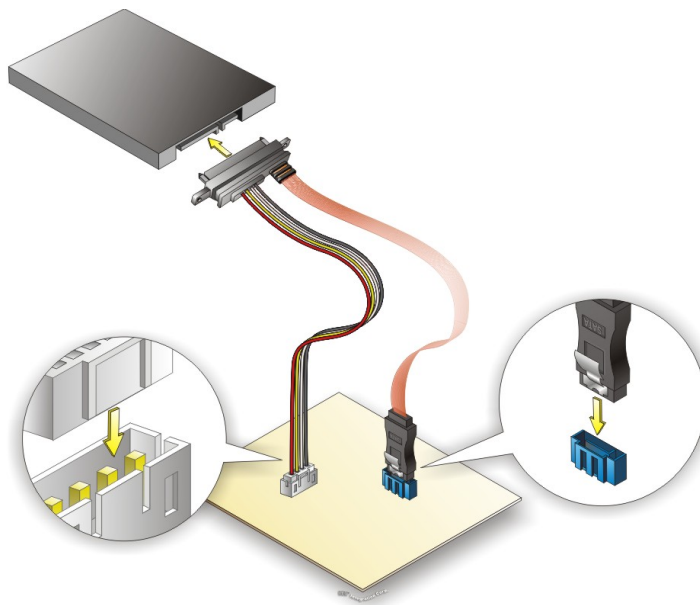


Figure 4-12: SATA Drive Cable Connection

Step 3: **Connect the cable to the SATA disk.** Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 4-12**.

Step 4: To remove the SATA cable from the SATA connector, press the clip on the connector at the end of the cable.

4.9 Available Drivers

All the drivers for the KINO-DH310 are available on IEI Resource Download Center (<https://download.ieiworld.com>). Type KINO-DH310 and press Enter to find all the relevant software, utilities, and documentation.


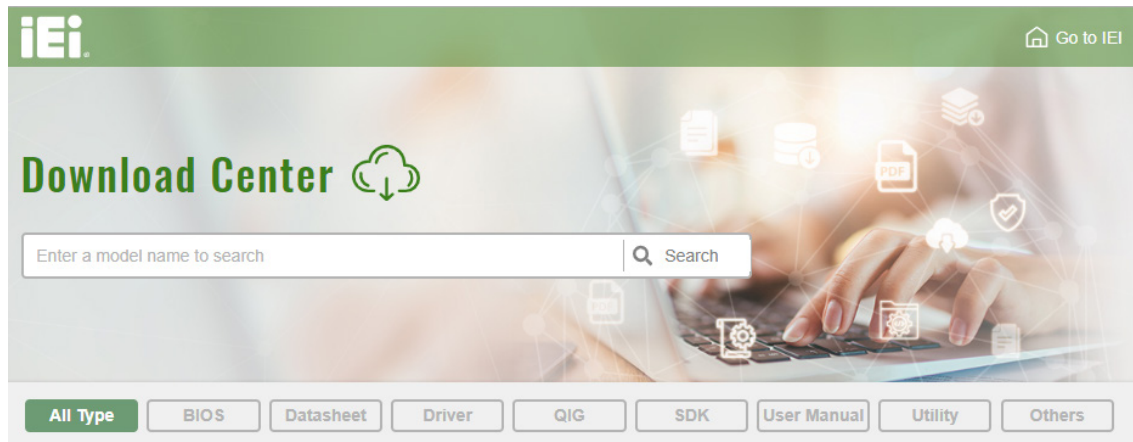


Figure 4-13: IEI Resource Download Center

4.9.1 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

Step 1: Go to <https://download.ieiworld.com>. Type KINO-DH310 and press Enter.

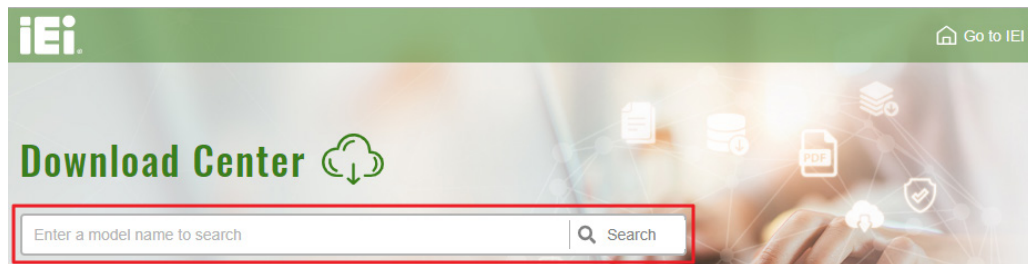

Step 2: All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.

KINO-DH310 Mini-ITX Motherboard

[All Type](#)
[BIOS](#)
[Datasheet](#)
[Driver](#)
[QIG](#)
[SDK](#)
[User Manual](#)
[Utility](#)
[Others](#)

WAFER-BT-i1 [Product Info](#)

[Embedded Computer](#) ▶ [Single Board Computer](#) ▶ [Embedded Board](#)
 3.5" SBC with Intel® 22nm Atom™/Celeron® on-board SoC

Driver

File Name	Published	Version	File Checksum
7B000-001033-RS V2.3.iso (2.23 GB)	2017/10/03	2.30	3B2DB1F792779A93A8F50DDBC3943E30

Step 3: Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (❶), or click the small arrow to find an individual driver and click the file name to download (❷).

7B000-001168-RS_V1.4.iso

❶ [Click here to download entire ISO file. \(2.99 GB\)](#)

* Download individual file *

❷

- Docs
 - 1.Chipset
 - 10.1.1.12.zip (2.7 MB)
 - 2.VGA
 - 3.Audio
 - 4.Lan
 - 5.USB 3.0
 - 6.Serial IO
 - 7.TXE
 - 8.Manual



NOTE:

To install software from the downloaded ISO image file in Windows 8, 8.1 or 10, double-click the ISO file to mount it as a virtual drive to view its content. On Windows 7 system, an additional tool (such as Virtual CD-ROM Control Panel from Microsoft) is needed to mount the file.

Chapter

5

BIOS

KINO-DH310 Mini-ITX Motherboard

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DEL** or **F2** key as soon as the system is turned on or
2. Press the **DEL** or **F2** key when the “**Press DEL or F2 to enter SETUP**” message appears on the screen.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again.

5.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **ESC** to quit. Navigation keys are shown in the following table.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page
Page Dn	Move to the next page

Key	Function
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS

Table 5-1: BIOS Navigation Keys

5.1.3 Getting Help

When **F1** is pressed, a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window, press **Esc**.

5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the clear CMOS button described in **Chapter 4**.

5.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

KINO-DH310 Mini-ITX Motherboard

5.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered.

The **Main** menu gives an overview of the basic system information.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit

BIOS Information
BIOS Vendor                American Megatrends
Core Version                5.13
Compliancy                 UEFI 2.6; PI 1.4
Project Version            B496AT07.ROM
Build Date and Time       04/30/2018 13:05:39

iWDD Vendor                iEi
iWDD Version               B496ER10.bin

Processor Information
Name                       CoffeeLake DT
Type                       Intel(R) Core(TM)
                           i5-8500T CPU @ 2.10GHz
Speed                      2100 MHz
ID                          0x906EA
Stepping                   U0
Number of Processors       6Core(s) / 6Thread(s)
Microcode Revision         84
GT Info                     GT2 (0x3E92)

IGFX VBIOS Version         1010
Memory RC Version          0.7.1.58
Total Memory                8192 MB
Memory Frequency           2133 MHz

PCH Information
Name                       CNL PCH-H
PCH SKU                     H310
Stepping                    B0

ME FW Version              12.0.0.1069
ME Firmware SKU            Consumer SKU

Access Level                Administrator

System Date                [Thu 01/12/2010]
System Time                 [15:10:27]

-----
-><: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.

```

BIOS Menu 1: Main

The **Main** menu has two user configurable fields:

→ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

→ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit  Server Mgmt
-----
> CPU Configuration          CPU Configuration
> Trusted Computing         Parameters
> ACPI Settings
> iWDD H/M Monitor
> F81866 Super IO Configuration
> RTC Wake Settings
> Serial Port Console Redirection
> USB Configuration
> NVMe Configuration
> iEi Feature

-----
→←: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit


Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
    
```

BIOS Menu 2: Advanced

KINO-DH310 Mini-ITX Motherboard

5.3.1 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 3**) to view detailed CPU specifications or enable the Intel Virtualization Technology.

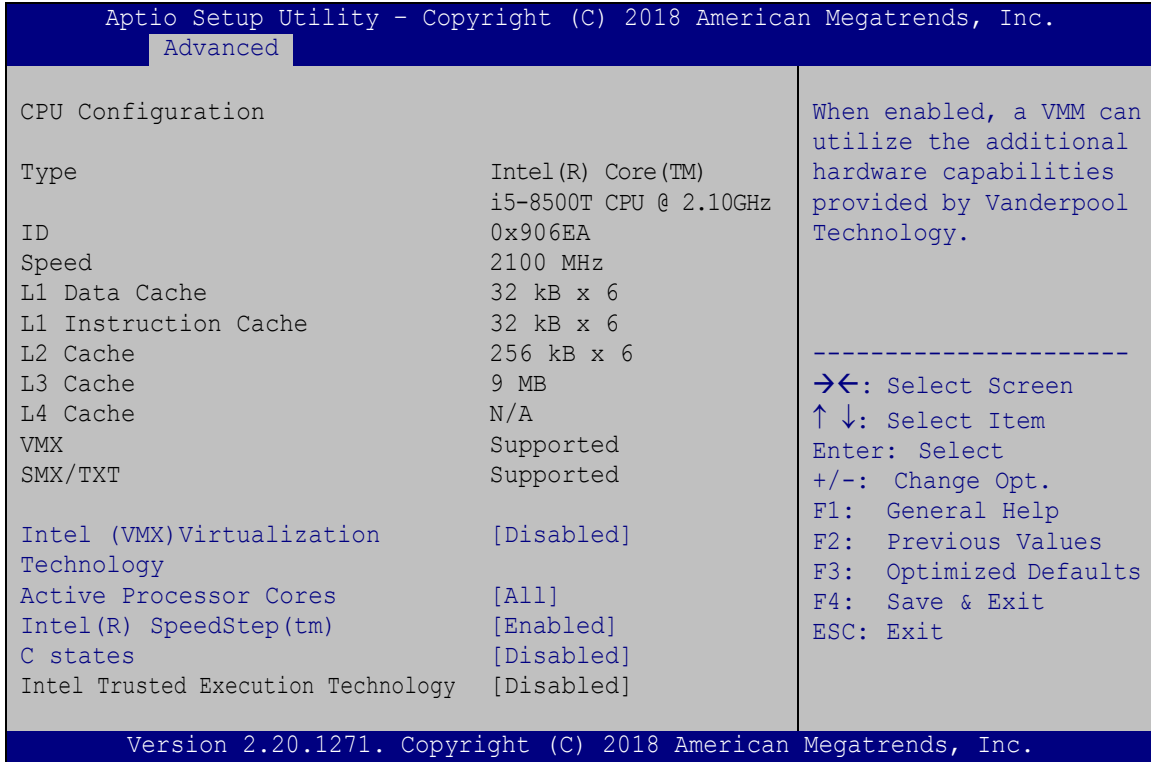

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.

Advanced

CPU Configuration		When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology. ----- →←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Type	Intel(R) Core(TM) i5-8500T CPU @ 2.10GHz	
ID	0x906EA	
Speed	2100 MHz	
L1 Data Cache	32 kB x 6	
L1 Instruction Cache	32 kB x 6	
L2 Cache	256 kB x 6	
L3 Cache	9 MB	
L4 Cache	N/A	
VMX	Supported	
SMX/TXT	Supported	
Intel (VMX)Virtualization Technology	[Disabled]	
Active Processor Cores	[All]	
Intel(R) SpeedStep(tm)	[Enabled]	
C states	[Disabled]	
Intel Trusted Execution Technology	[Disabled]	

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.

BIOS Menu 3: CPU Configuration

→ Intel (VMX) Virtualization Technology [Disabled]

Use the **Intel (VMX) Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- **Disabled** **DEFAULT** Disables Intel Virtualization Technology.
- **Enabled** Enables Intel Virtualization Technology.

→ Active Processor Cores [All]

Use the **Active Processor Cores** BIOS option to enable numbers of cores in the processor package.

- **All** **DEFAULT** Enable all cores in the processor package.
- **1** Enable one core in the processor package.
- **2** Enable two cores in the processor package.
- **3** Enable three cores in the processor package.
- **4** Enable four cores in the processor package.
- **5** Enable five cores in the processor package.

→ **Intel(R) SpeedStep(tm) [Enabled]**

Use the **Intel(R) SpeedStep(tm)** option to enable or disable the Intel® SpeedStep Technology which allows more than two frequency ranges to be supported.

- **Disabled** Disables Intel® SpeedStep Technology
- **Enabled** **DEFAULT** Enables Intel® SpeedStep Technology

→ **C States [Disabled]**


Use the **C States** BIOS option to enable or disable CPU power management which allows CPU to go to C states when it is not 100% use.

- **Disabled** **DEFAULT** Disables CPU power management.
- **Enabled** Enables CPU power management.

KINO-DH310 Mini-ITX Motherboard

5.3.2 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 4**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).

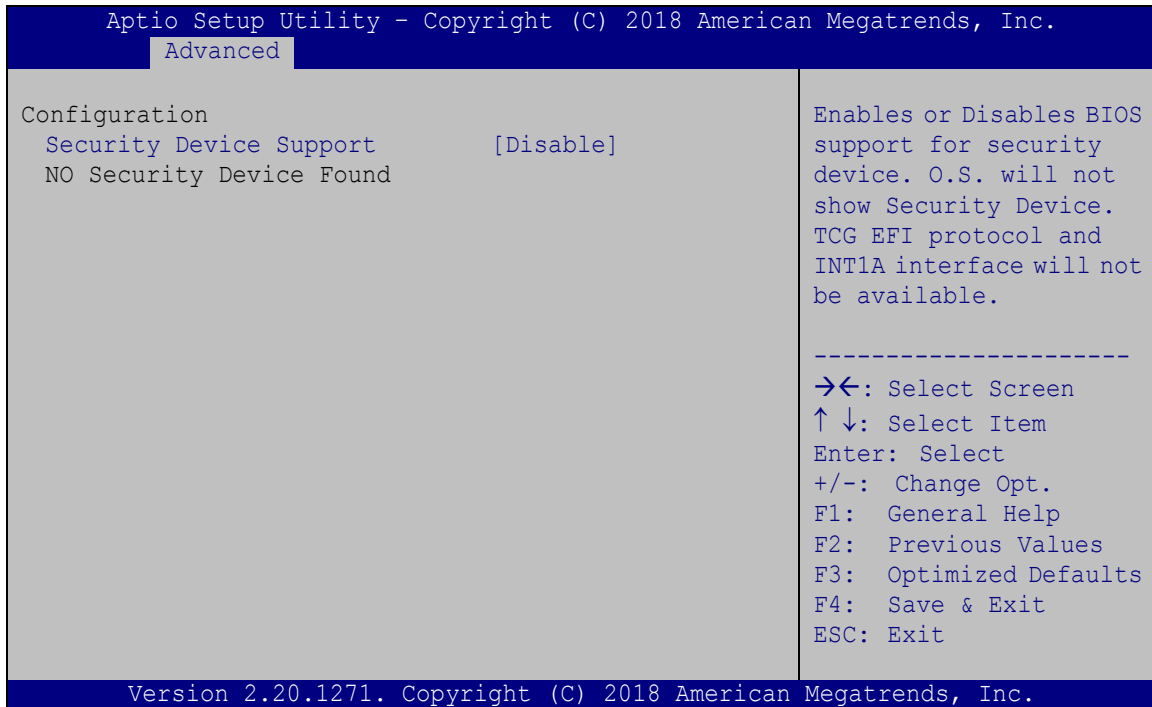

BIOS Menu 4: Trusted Computing


→ Security Device Support [Disable]

Use the **Security Device Support** option to configure support for the TPM.

- **Disable** **DEFAULT** TPM support is disabled.
- **Enable** TPM support is enabled.

5.3.3 ACPI Settings

The **ACPI Settings** menu (**BIOS Menu 5**) configures the Advanced Configuration and Power Interface (ACPI) options.

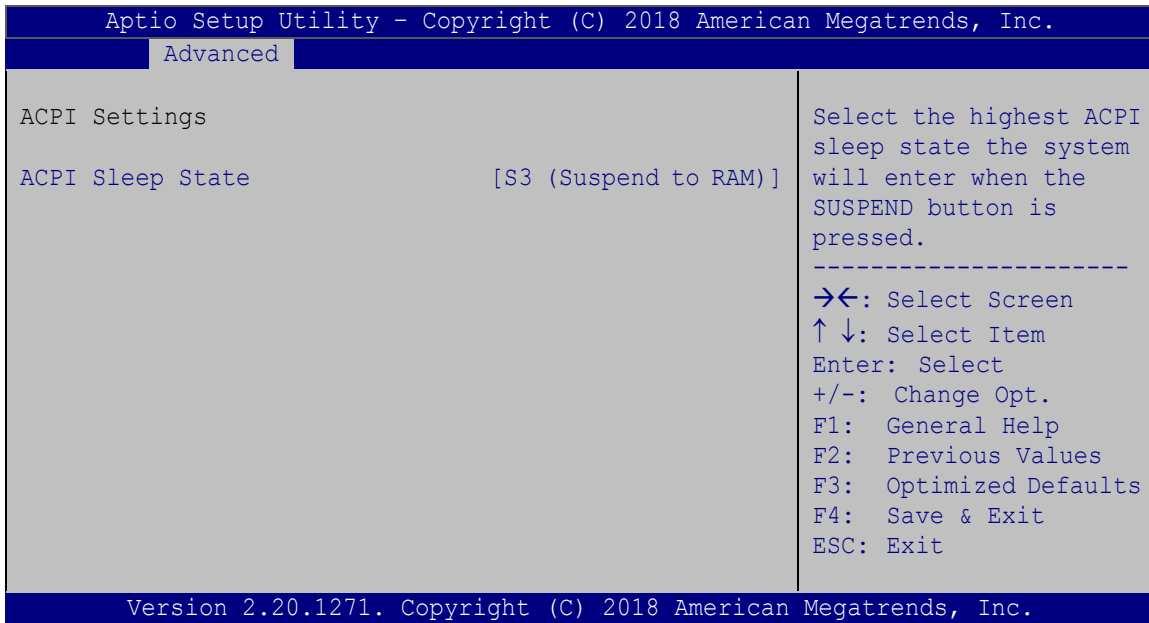

BIOS Menu 5: ACPI Configuration

→ ACPI Sleep State [S3 (Suspend to RAM)]

Use the **ACPI Sleep State** option to specify the sleep state the system enters when it is not being used.

- **S3 (Suspend to RAM)** **DEFAULT** The caches are flushed and the CPU is powered off. Power to the RAM is maintained. The computer returns slower to a working state, but more power is saved.

KINO-DH310 Mini-ITX Motherboard

5.3.4 iWDD H/W Monitor

The **iWDD H/W Monitor** menu (**BIOS Menu 6**) contains the fan configuration submenu, and displays operating temperature, fan speeds and system voltages.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
  Advanced
PC Health Status
CPU temperature           : +38°C
SYS temperature          : +0°C

CPU_FAN1 Speed           : 2652 RPM
SYS_FAN1 Speed           : N/A

CPU_CORE                  : +0.838 V
+5V                       : +4.838 V
+12V                      : +12.096 V
+DDR                      : +1.202 V
+5VSB                     : +5.005 V
+3.3V                     : +3.281 V
+3.3VSB                   : +3.329 V

> Smart Fan Mode Configuration

Smart Fan Mode Select

-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
  
```

BIOS Menu 6: iWDD H/W Monitor

→ PC Health Status

The following system parameters and values are shown. The system parameters that are monitored are:

- System Temperatures:
 - CPU Temperature
 - System Temperature
- Fan Speed:
 - CPU Fan Speed
 - System Fan Speed
- Voltages:
 - CPU_CORE
 - +5V
 - +12V
 - +DDR
 - +5VSB

- +3.3V
- +3.3VSB

5.3.4.1 Smart Fan Mode Configuration

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 7**) to configure the CPU/system fan temperature and speed settings.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
-----
Advanced
-----
Smart Fan Mode Configuration
CPU_FAN1 Smart Fan Control      [Auto Mode]
Auto mode fan start temperature 40
Auto mode fan off temperature   30
Auto mode fan start PWM         30
Auto mode fan slope PWM         2

SYS_FAN1 Smart Fan Control      [Auto Mode]
Auto mode fan start temperature 50
Auto mode fan off temperature   40
Auto mode fan start PWM         30
Auto mode fan slope PWM         1

Smart Fan Mode Select
-----
-><-: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
    
```

BIOS Menu 7: Smart Fan Mode Configuration

→ CPU_FAN1 Smart Fan Control/SYS_FAN1 Smart Fan Control [Auto Mode]

Use the **CPU_FAN1 Smart Fan Control/SYS_FAN1 Smart Fan Control** option to configure the CPU/System Smart Fan.

- **Manual Mode** The fan spins at the speed set in Manual Mode settings.
- **Auto Mode** **DEFAULT** The fan adjusts its speed using Auto Mode settings.

→ Auto mode fan start/off temperature

Use the + or – key to change the **Auto mode fan start/off temperature** value. Enter a decimal number between 1 and 100.

KINO-DH310 Mini-ITX Motherboard

→ Auto mode fan start PWM

Use the + or – key to change the **Auto mode fan start PWM** value. Enter a decimal number between 1 and 100.

→ Auto mode fan slope PWM

Use the + or – key to change the **Auto mode fan slope PWM** value. Enter a decimal number between 1 and 8.

5.3.5 F81866 Super IO Configuration

Use the **F81866 Super IO Configuration** menu (**BIOS Menu 8**) to set or change the configurations for the parallel ports and serial ports.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
  Advanced
Super IO Configuration
Super IO Chip                F81866
> Serial Port 1 Configuration
> Serial Port 2 Configuration
> Serial Port 3 Configuration
> Serial Port 4 Configuration
Case Open Detection          [Disabled]

Set Parameters of Serial
Port 1 (COMA)
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
  
```

BIOS Menu 8: F81866 Super IO Configuration


→ Case Open Detection [Disabled]

Use the **Case Open Detection** option to enable or disable the case open detection function.

- **Disabled** **DEFAULT** Disable the case open detection function
- **Enabled** Enable the case open detection function

5.3.5.1 Serial Port n Configuration

Use the **Serial Port n Configuration** menu (**BIOS Menu 9**) to configure the serial ports.

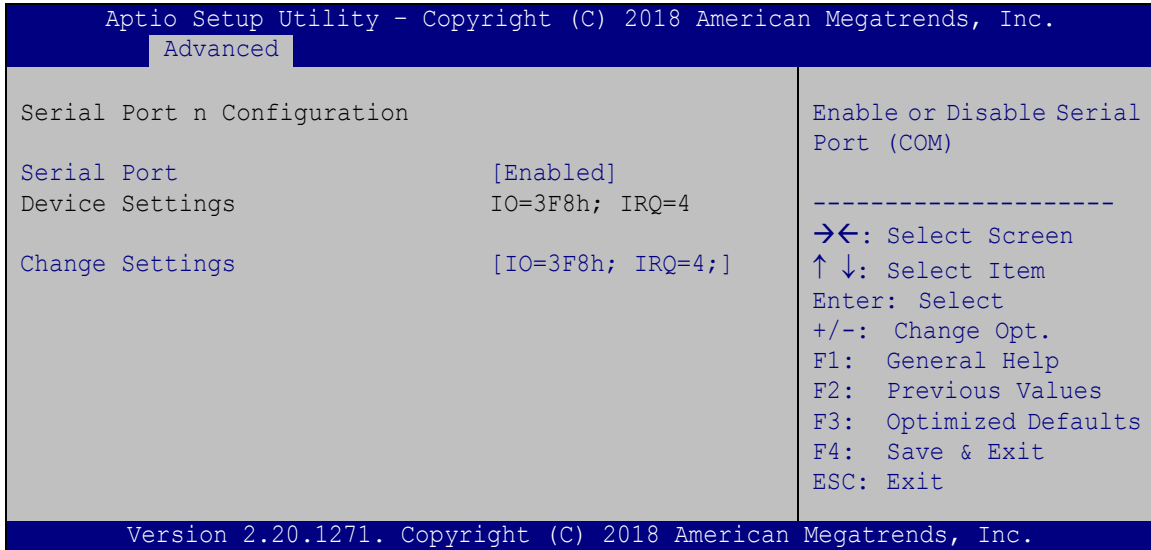

BIOS Menu 9: Serial Port n Configuration Menu

5.3.5.2 Serial Port 1 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

→ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **IO=3F8h; DEFAULT** Serial Port I/O port address is 3F8h and the interrupt address is IRQ4
- **IO=3F8h; IRQ=4**
- **IO=3F8h; DEFAULT** Serial Port I/O port address is 3F8h and the interrupt address is IRQ4
- **IO=3F8h; IRQ=3, 4, 7** Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4, 7

KINO-DH310 Mini-ITX Motherboard

- **IO=2F8h;**
IRQ=3, 4, 7 Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4, 7
- **IO=3E8h;**
IRQ=3, 4, 7 Serial Port I/O port address is 3E8h and the interrupt address is IRQ3, 4, 7
- **IO=2E8h;**
IRQ=3, 4, 7 Serial Port I/O port address is 2E8h and the interrupt address is IRQ3, 4, 7

5.3.5.3 Serial Port 2 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

→ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **IO=2F8h; DEFAULT** Serial Port I/O port address is 2F8h and the interrupt address is IRQ3
- **IO=3F8h;**
IRQ=3, 4, 7 Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4, 7
- **IO=2F8h;**
IRQ=3, 4, 7 Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4, 7
- **IO=3E8h;**
IRQ=3, 4, 7 Serial Port I/O port address is 3E8h and the interrupt address is IRQ3, 4, 7
- **IO=2E8h;**
IRQ=3, 4, 7 Serial Port I/O port address is 2E8h and the interrupt address is IRQ3, 4, 7

5.3.5.4 Serial Port 3 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

→ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **IO=3E8h; DEFAULT** Serial Port I/O port address is 3E8h and the interrupt address is IRQ7
IRQ=7
- **IO=3F8h;** Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4, 7
IRQ=3, 4, 7
- **IO=2F8h;** Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4, 7
IRQ=3, 4, 7
- **IO=3E8h;** Serial Port I/O port address is 3E8h and the interrupt address is IRQ3, 4, 7
IRQ=3, 4, 7
- **IO=2E8h;** Serial Port I/O port address is 2E8h and the interrupt address is IRQ3, 4, 7
IRQ=3, 4, 7

5.3.5.5 Serial Port 4 Configuration

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

KINO-DH310 Mini-ITX Motherboard


→ Change Settings [Auto]

Use the **Change Settings** option to change the serial port IO port address and interrupt address.

- **IO=2E8h; DEFAULT** Serial Port I/O port address is 2E8h and the interrupt address is IRQ7
IRQ=7
- **IO=3F8h;** Serial Port I/O port address is 3F8h and the interrupt address is IRQ3, 4, 7
IRQ=3, 4, 7
- **IO=2F8h;** Serial Port I/O port address is 2F8h and the interrupt address is IRQ3, 4, 7
IRQ=3, 4, 7
- **IO=3E8h;** Serial Port I/O port address is 3E8h and the interrupt address is IRQ3, 4, 7
IRQ=3, 4, 7
- **IO=2E8h;** Serial Port I/O port address is 2E8h and the interrupt address is IRQ3, 4, 7
IRQ=3, 4, 7

5.3.6 RTC Wake Settings

The **RTC Wake Settings** menu (**BIOS Menu 10**) enables the system to wake at the specified time.

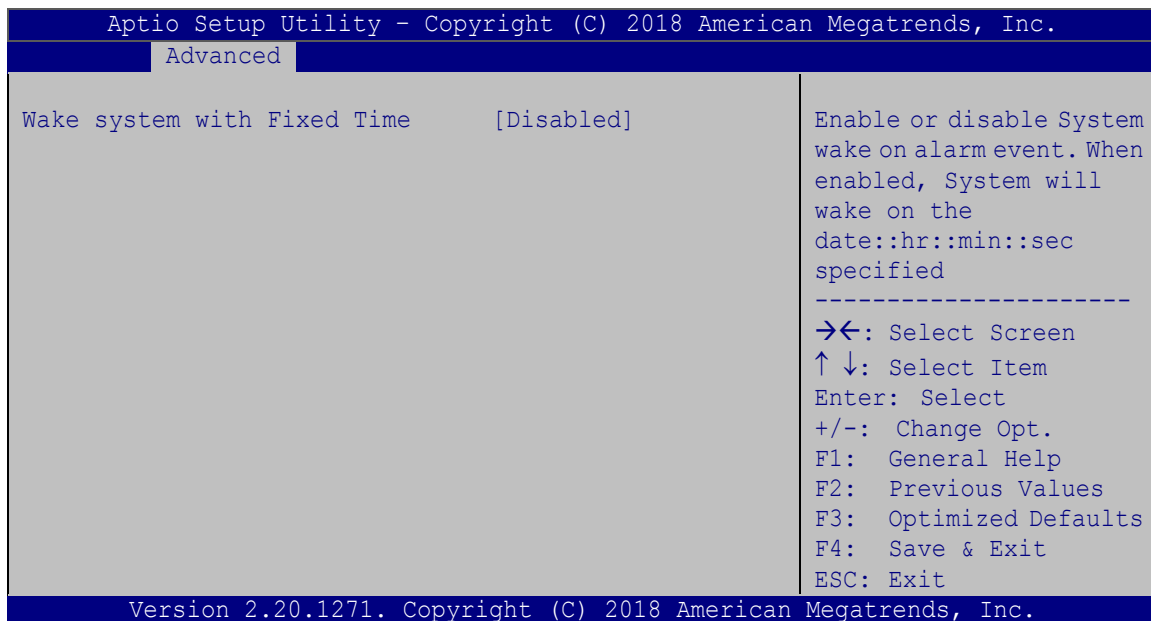

BIOS Menu 10: RTC Wake Settings

→ **Wake system with Fixed Time [Disabled]**

Use the **Wake system with Fixed Time** option to enable or disable the system wake on alarm event.

→ **Disabled** **DEFAULT** The real time clock (RTC) cannot generate a wake event.

→ **Enabled** If selected, the **Wake up every day** option appears allowing you to enable to disable the system to wake every day at the specified time. Besides, the following options appear with values that can be selected:

Wake up date

Wake up hour

Wake up minute


Wake up second

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

KINO-DH310 Mini-ITX Motherboard

5.3.7 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 11**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

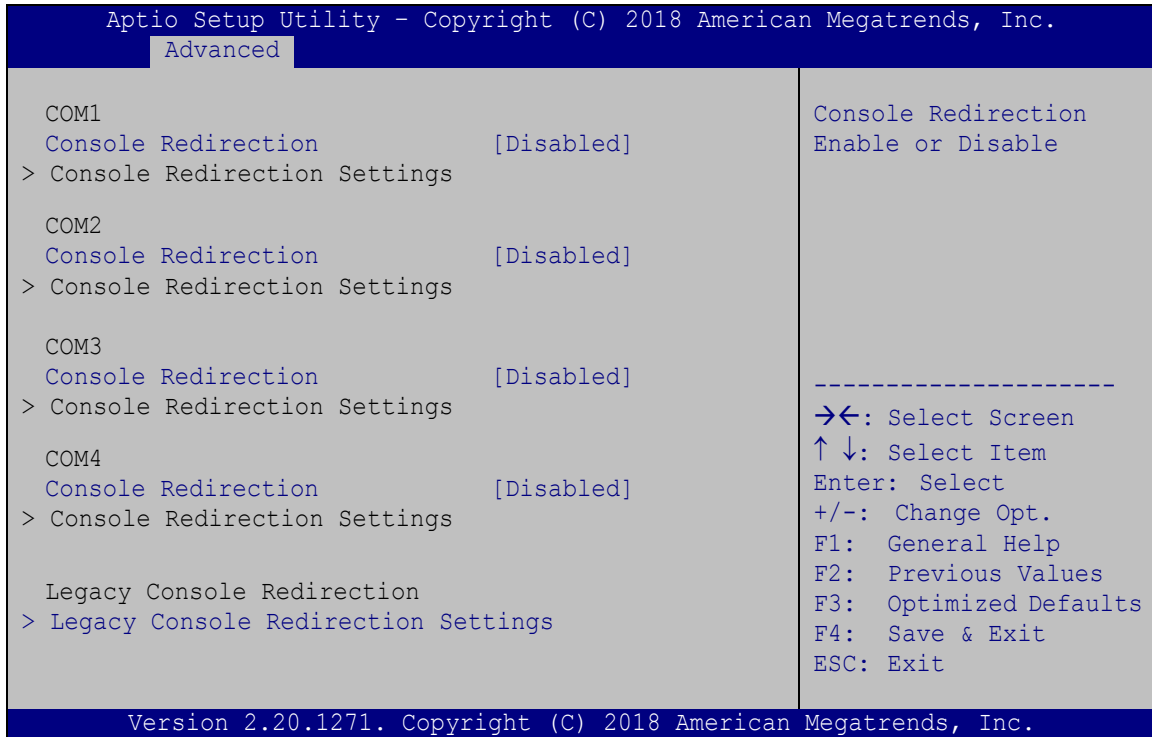

BIOS Menu 11: Serial Port Console Redirection

→ Console Redirection [Disabled]

Use **Console Redirection** option to enable or disable the console redirection function.

- **Disabled** **DEFAULT** Disabled the console redirection function
- **Enabled** Enabled the console redirection function

The following options are available in the **Console Redirection Settings** submenu when the **Console Redirection** option is enabled.

→ Terminal Type [ANSI]

Use the **Terminal Type** option to specify the remote terminal type.

- **VT100** The target terminal type is VT100
- **VT100+** The target terminal type is VT100+
- **VT-UTF8** The target terminal type is VT-UTF8
- **ANSI** **DEFAULT** The target terminal type is ANSI

→ Bits per second [115200]

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match the other side. Long or noisy lines may require lower speeds.

- **9600** Sets the serial port transmission speed at 9600.
- **19200** Sets the serial port transmission speed at 19200.
- **57600** Sets the serial port transmission speed at 57600.
- **115200** **DEFAULT** Sets the serial port transmission speed at 115200.

→ Data Bits [8]

Use the **Data Bits** option to specify the number of data bits.

- **7** Sets the data bits at 7.
- **8** **DEFAULT** Sets the data bits at 8.

→ Parity [None]

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

- **None** **DEFAULT** No parity bit is sent with the data bits.
- **Even** The parity bit is 0 if the number of ones in the data bits is even.

KINO-DH310 Mini-ITX Motherboard


- ➔ **Odd** The parity bit is 0 if the number of ones in the data bits is odd.
- ➔ **Mark** The parity bit is always 1. This option does not provide error detection.
- ➔ **Space** The parity bit is always 0. This option does not provide error detection.

➔ **Stop Bits [1]**

Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

- ➔ **1** **DEFAULT** Sets the number of stop bits at 1.
- ➔ **2** Sets the number of stop bits at 2.

5.3.7.1 Legacy Console Redirection Settings

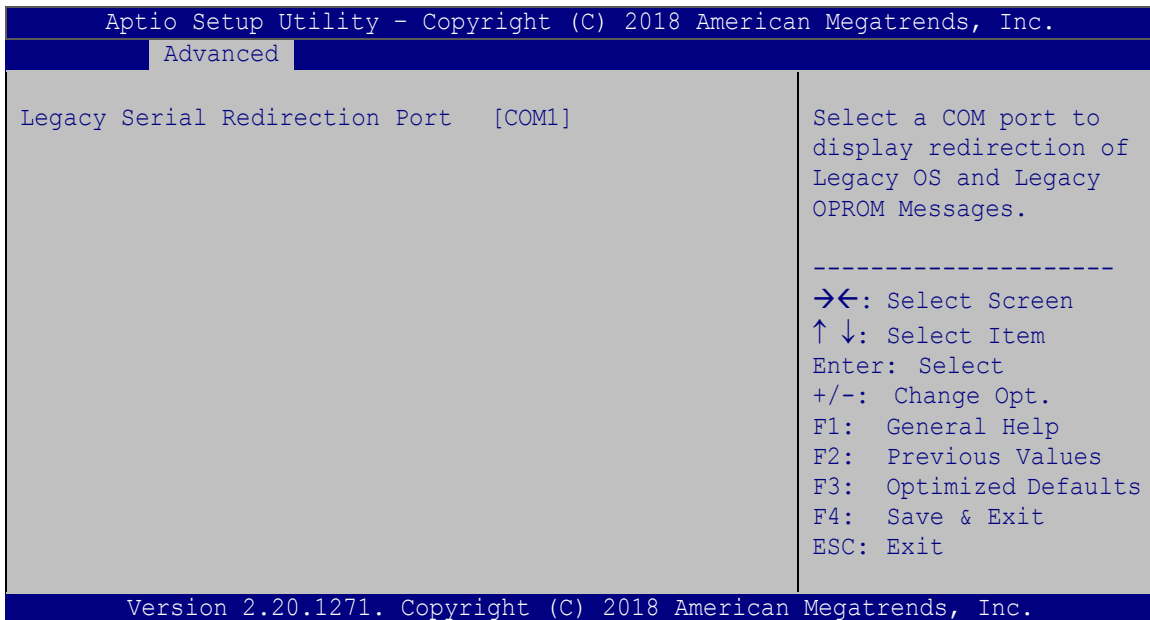


BIOS Menu 12: Legacy Console Redirection Settings

→ Legacy Serial Redirection Port [COM1]

Use the Legacy Serial Redirection Port option to select a COM port to display redirection of legacy OS and legacy OPRM messages.

5.3.8 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 13**) to read USB configuration information and configure the USB settings.

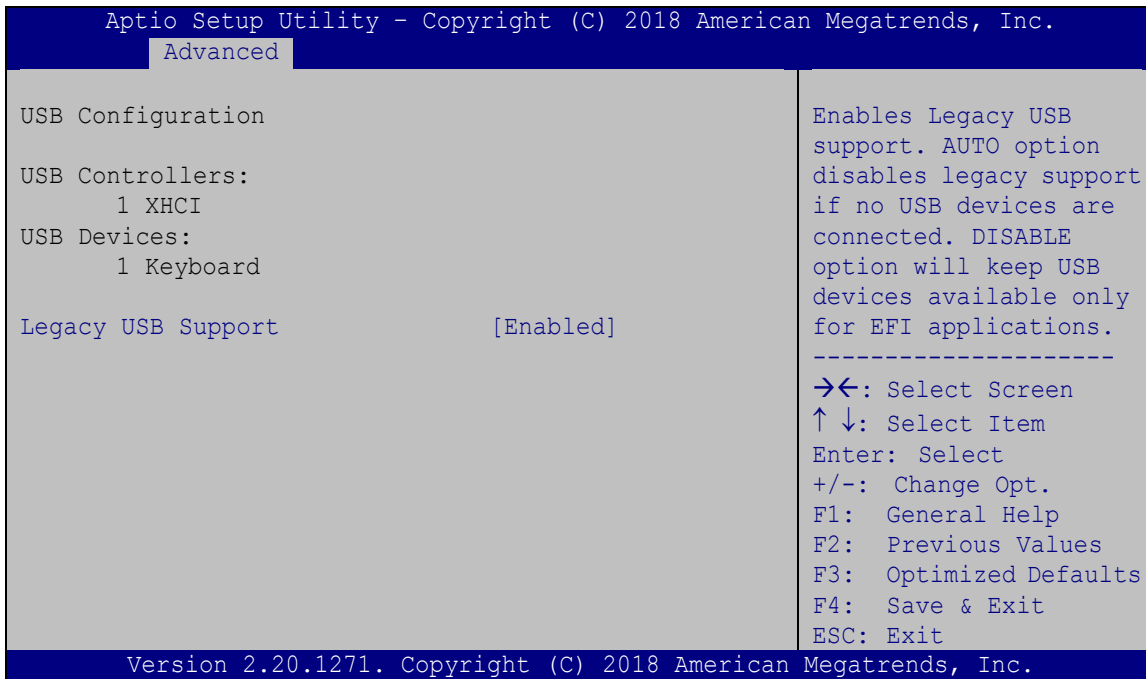

BIOS Menu 13: USB Configuration

→ Legacy USB Support [Enabled]

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support. Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

- **Enabled** **DEFAULT** Legacy USB support enabled
- **Disabled** Legacy USB support disabled

KINO-DH310 Mini-ITX Motherboard

- ➔ **Auto** Legacy USB support disabled if no USB devices are connected

5.3.9 NVMe Configuration

Use the **NVMe Configuration (BIOS Menu 14)** menu to display the NVMe controller and device information.

```


Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
-----
Advanced
-----
NVMe controller and Drive information
No NVMe Device Found

-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
-----
Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
  
```

BIOS Menu 14: NVMe Configuration

5.3.10 IEI Feature

Use the **IEI Feature** menu (**BIOS Menu 15**) to configure One Key Recovery function.

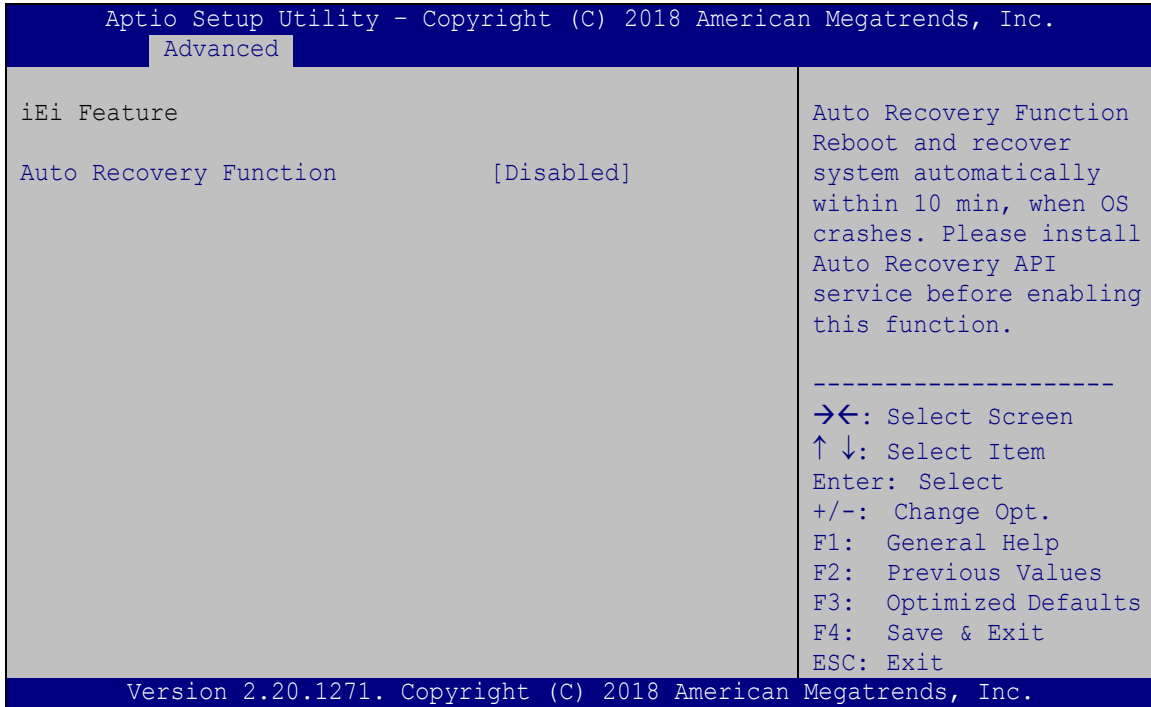

BIOS Menu 15: IEI Feature

→ Auto Recovery Function [Disabled]

Use the **Auto Recovery Function** BIOS option to enable or disable the auto recovery function of the IEI One Key Recovery.

- **Disabled** **DEFAULT** Auto recovery function disabled
- **Enabled** Auto recovery function enabled

KINO-DH310 Mini-ITX Motherboard

5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 16**) to access the PCH IO and System Agent (SA) configuration menus.



WARNING!

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

```


Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Main   Advanced  Chipset  Security  Boot   Save & Exit
-----
> System Agent (SA) Configuration      System Agent (SA)
> PCH-IO Configuration                 Parameters
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
    
```

BIOS Menu 16: Chipset

5.4.1 System Agent (SA) Configuration

Use the **System Agent (SA) Configuration** menu (**BIOS Menu 17**) to configure the System Agent (SA) parameters.

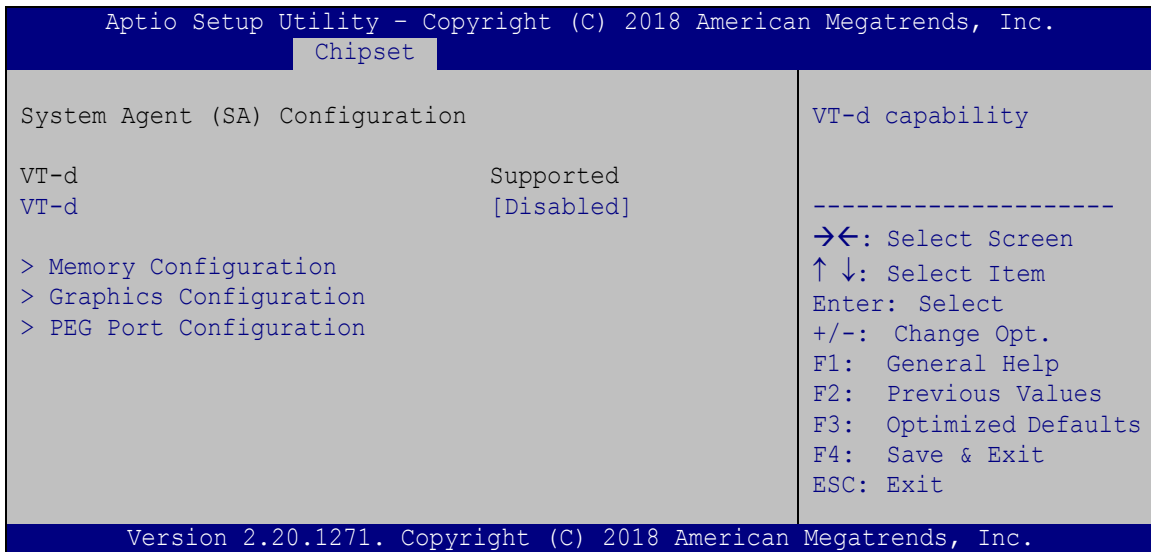

BIOS Menu 17: System Agent (SA) Configuration

→ VT-d [Disabled]


Use the **VT-d** option to enable or disable VT-d capability.

- **Disabled** **DEFAULT** Disables VT-d capability.
- **Enabled** Enables VT-d capability.

KINO-DH310 Mini-ITX Motherboard

5.4.1.1 Memory Configuration


Use the **Memory Configuration** submenu (**BIOS Menu 18**) to view memory information.

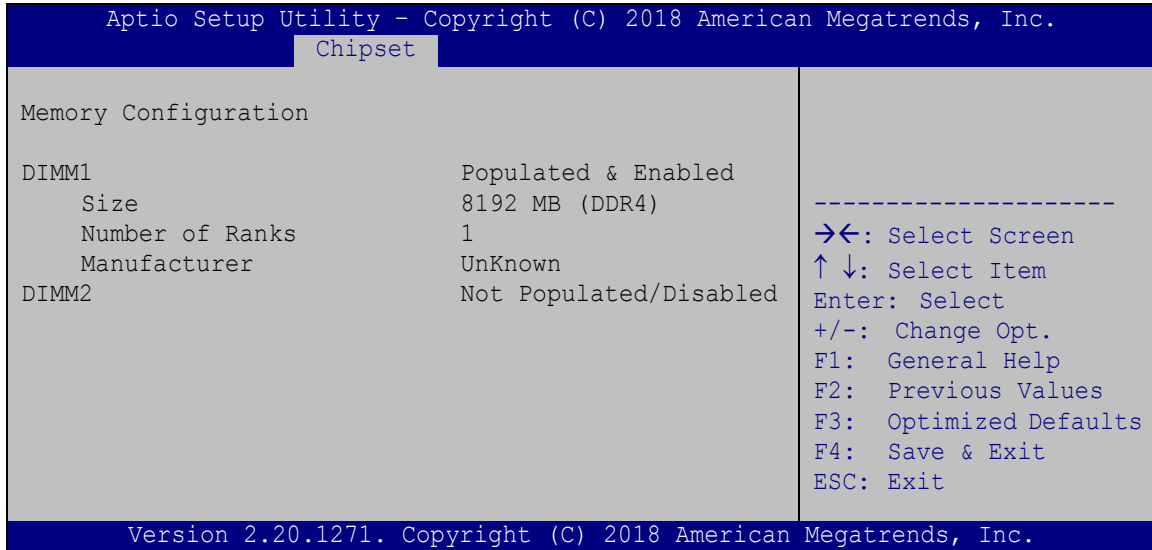

BIOS Menu 18: Memory Configuration

5.4.1.2 Graphics Configuration

Use the **Graphics Configuration (BIOS Menu 19)** menu to configure the video device connected to the system.

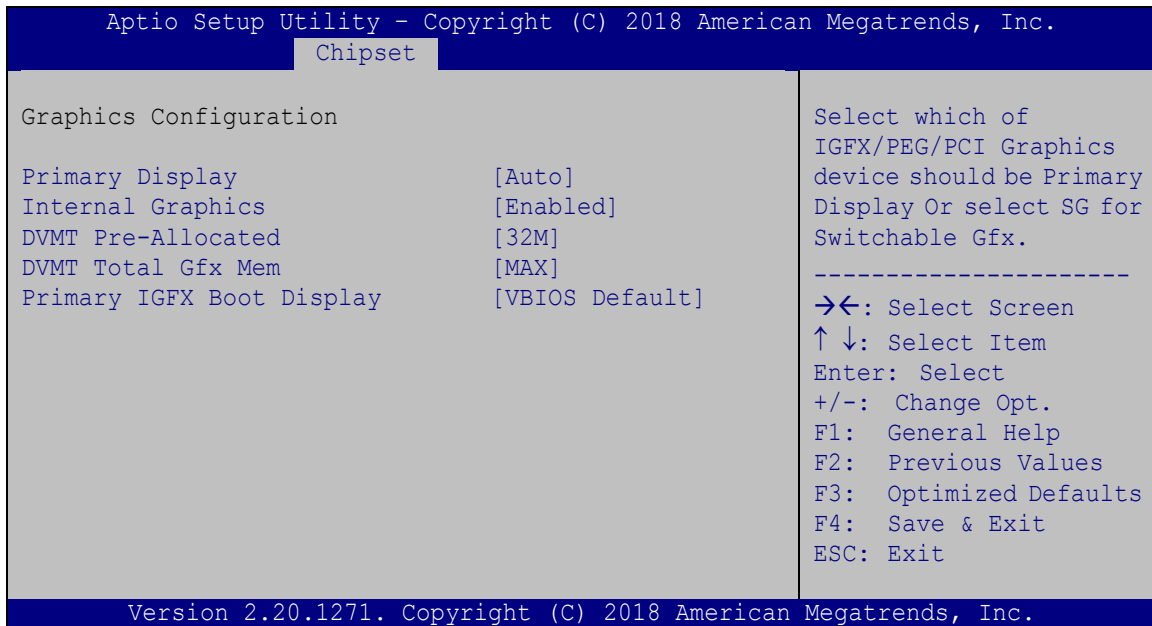

BIOS Menu 19: Graphics Configuration

→ Primary Display [Auto]

Use the **Primary Display** option to select the primary graphics controller the system uses.

The following options are available:

- Auto **Default**
- IGFX
- PEG

→ Internal Graphics [Enabled]

Use the **Internal Graphics** option to configure whether to keep IGFX enabled. If user wants to support dual display by internal graphics and external graphics, this Internal Graphics option should be set to Enabled and the above Primary Display option should be set to IGFX.

- Auto** Auto mode
- Disabled** Disables IGFX.
- Enabled** **DEFAULT** Enables IGFX.

→ DVMT Pre-Allocated [32M]

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

- 32M **Default**
- 64M

→ DVMT Total Gfx Mem [MAX]

Use the **DVMT Total Gfx Mem** option to select DVMT5.0 total graphic memory size used by the internal graphic device. The following options are available:

- 128M
- 256M
- MAX **Default**

KINO-DH310 Mini-ITX Motherboard

→ Primary IGFX Boot Display [VBIOS Default]

Use the **Primary IGFX Boot Display** option to select the display device used by the system when it boots. Configuration options are listed below.

- VBIOS Default **Default**
- HDMI-B
- iDP
- HDMI-C

5.4.1.3 PEG Port Configuration

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Chipset
PEG Port Configuration
PEG 0:1:0                Not Present
  Enable Root Port        [Enabled]
  Max Link Speed          [Auto]
> PEG Port Feature Configuration
Enable or Disable the Root Port
-----
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
  
```

BIOS Menu 20: PEG Port Configuration

→ Enable Root Port [Enabled]

Use the **Enable Root Port** option to enable or disable the PCI Express (PEG) controller.

- **Disabled** Disables the PCI Express (PEG) controller.
- **Enabled** **DEFAULT** Enables the PCI Express (PEG) controller.

→ Max Link Speed [Auto]


Use the **Max Link Speed** option to select the maximum link speed of the PCI Express slot.

The following options are available:

- Auto **Default**
- Gen1
- Gen2
- Gen3

5.4.1.3.1 PEG Port Feature Configuration

Use the **PEG Port Feature Configuration** submenu (**BIOS Menu 21**) to configure the SA PCIe settings.

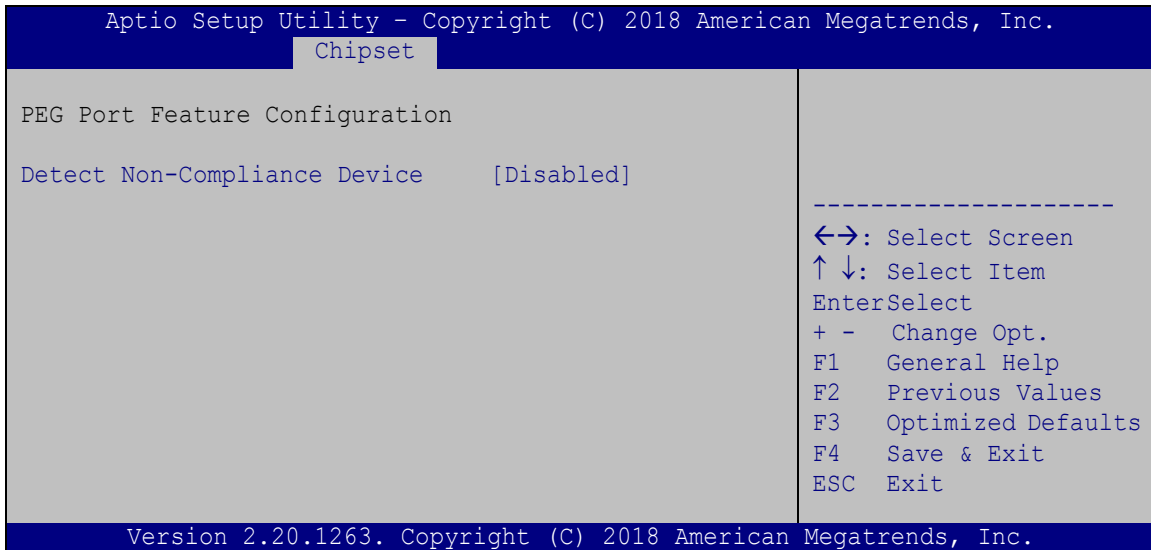

BIOS Menu 21: PEG Port Feature Configuration

→ Detect Non-Compliance Device [Disabled]

Use the **Detect Non-Compliance Device** option to enable or disable detecting if a non-compliance PCI Express device is connected to the PCI Express slot.


- **Disabled** **DEFAULT** Disables to detect if a non-compliance PCI Express device is connected to the PCI Express slot.

KINO-DH310 Mini-ITX Motherboard

- ➔ **Enabled** Enables to detect if a non-compliance PCI Express device is connected to the PCI Express slot.

5.4.2 PCH-IO Configuration

Use the **PCH-IO Configuration** menu (**BIOS Menu 22**) to configure the PCH parameters.

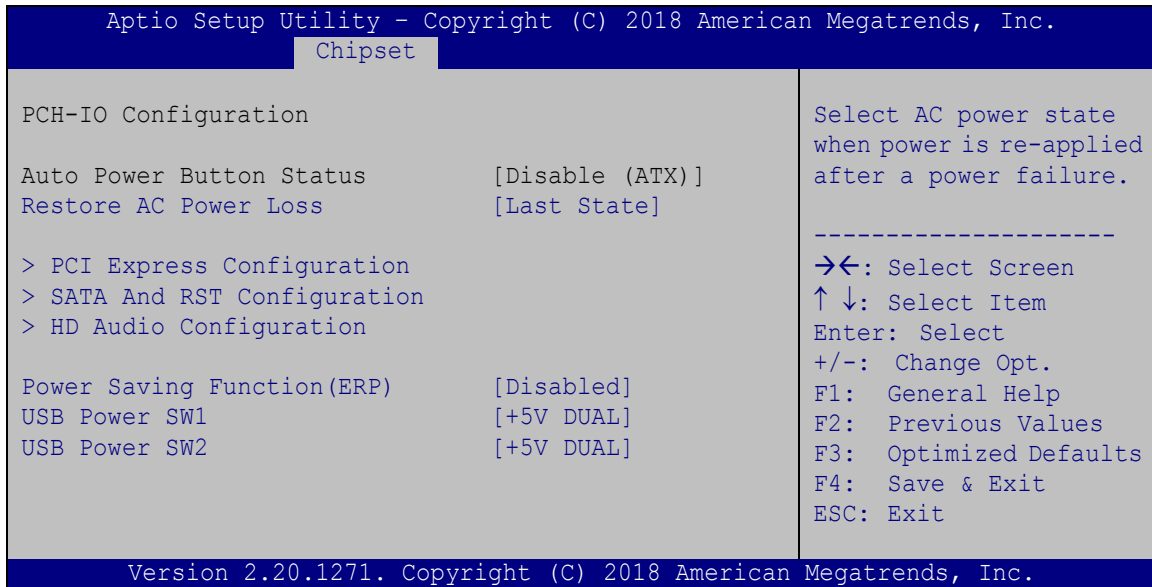

BIOS Menu 22: PCH-IO Configuration

➔ **Restore AC Power Loss [Last State]**

Use the **Restore AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- ➔ **Power Off** The system remains turned off.
- ➔ **Power On** The system turns on.
- ➔ **Last State** **DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

→ Power Saving Function(ERP) [Disabled]

Use the **Power Saving Function(ERP)** BIOS option to enable or disable the power saving function.

- **Disabled** **DEFAULT** Power saving function is disabled.
- **Enabled** Power saving function is enabled. It will reduce power consumption when the system is off.

→ USB Power SW1 [+5V DUAL]

Use the **USB Power SW1** BIOS option to configure the USB power source for the corresponding USB connectors (Table 5-2).

- **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual
- **+5V** Sets the USB power source to +5V

→ USB Power SW2 [+5V DUAL]

Use the **USB Power SW2** BIOS option to configure the USB power source for the corresponding USB connectors (Table 5-2).

- **+5V DUAL** **DEFAULT** Sets the USB power source to +5V dual
- **+5V** Sets the USB power source to +5V

BIOS Options	Configured USB Ports
USB Power SW1	LAN1_USB1 (external USB 3.2 Gen 1 ports) LAN2_USB2 (external USB 3.2 Gen 1 ports)
USB Power SW2	USB1 (internal USB 2.0 ports) USB2 (internal USB 2.0 ports)

Table 5-2: BIOS Options and Configured USB Ports

KINO-DH310 Mini-ITX Motherboard

5.4.2.1 PCI Express Configuration

Use the **PCI Express Configuration** submenu (**BIOS Menu 23**) to configure the PCIe Mini slot.

```


Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
  Chipset
-----
PCI Express Configuration
> M.2(A) Slot
> M.2(M) Slot

PCI Express Root Port Settings.
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
  
```

BIOS Menu 23: PCI Express Configuration

5.4.2.1.1 M2 (A) Slot / M2 (M) Slot

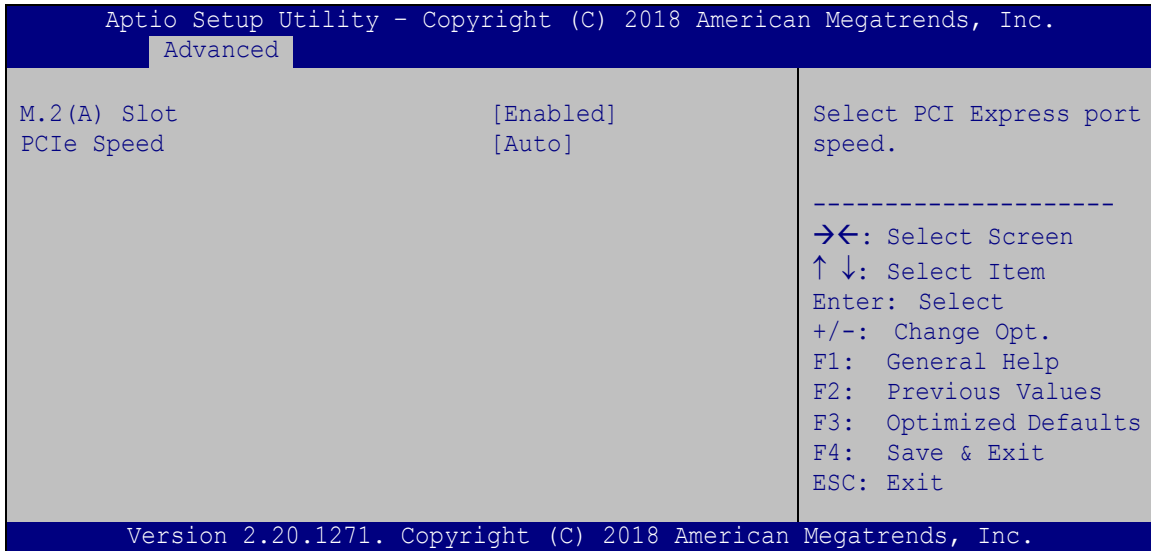

BIOS Menu 24: MPCIE1 Slot

→ M2(A) Slot / M2(M) Slot [Enabled]

Use the **M2(A) Slot / M2(M) Slot** option to enable or disable the M.2 slot.

- **Disabled** Disables the M.2 slot.
- **Enabled** **DEFAULT** Enables the M.2 slot.

KINO-DH310 Mini-ITX Motherboard


→ PCIe Speed [Auto]

Use this option to select the support type of the PCI Express slots. The following options are available:

- Auto **Default**
- Gen1
- Gen2
- Gen3

5.4.2.2 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 25**) to change and/or set the configuration of the SATA devices installed in the system.

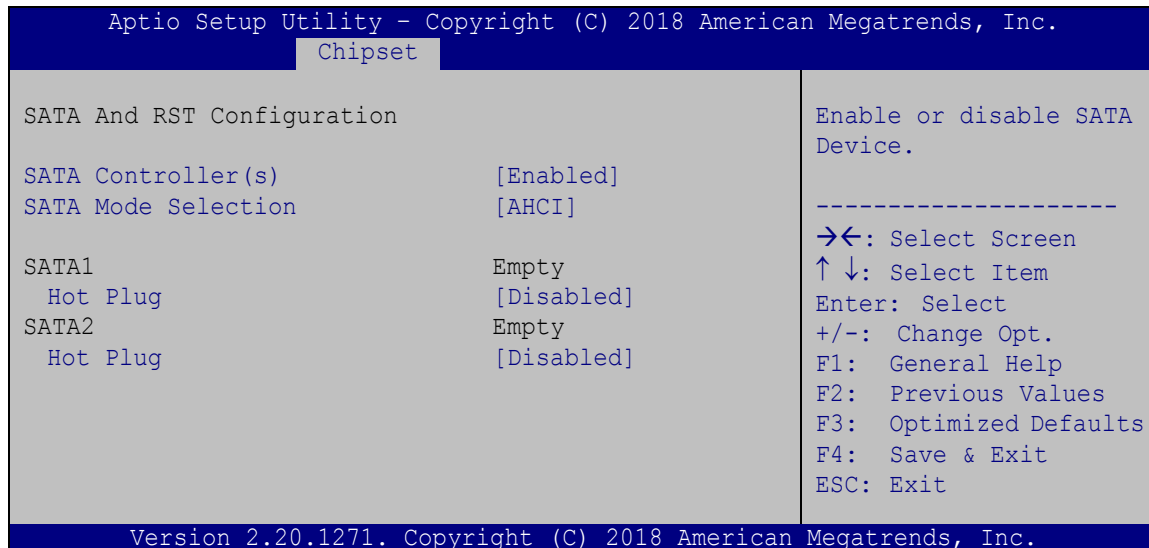

BIOS Menu 25: SATA Configuration

→ SATA Controller(s) [Enabled]

Use the **SATA Controller(s)** option to configure the SATA controller(s).

- **Enabled** **DEFAULT** Enables the on-board SATA controller(s).
- **Disabled** Disables the on-board SATA controller(s).

→ SATA Mode Selection [AHCI]

Use the **SATA Mode Selection** option to determine how the SATA devices operate.

→ **AHCI** **DEFAULT** Configures SATA devices as AHCI device.

→ Hot Plug [Disabled]

Use the **Hot Plug** option to designate the correspondent SATA port as hot-pluggable.

→ **Disabled** **DEFAULT** Disables the hot-pluggable function of the SATA port.

→ **Enabled** Designates the SATA port as hot-pluggable.

5.4.2.3 HD Audio Configuration

Use the **HD Audio Configuration** menu (**BIOS Menu 26**) to configure the PCH Azalia settings.



BIOS Menu 26: HD Audio Configuration

KINO-DH310 Mini-ITX Motherboard


→ HD Audio [Auto]

Use the **HD Audio** option to enable or disable the High Definition Audio controller.

- **Disabled** The onboard High Definition Audio controller is disabled.
- **Enabled** **DEFAULT** The onboard High Definition Audio controller is enabled.

5.5 Security

Use the **Security** menu (**BIOS Menu 27**) to set system and user passwords.

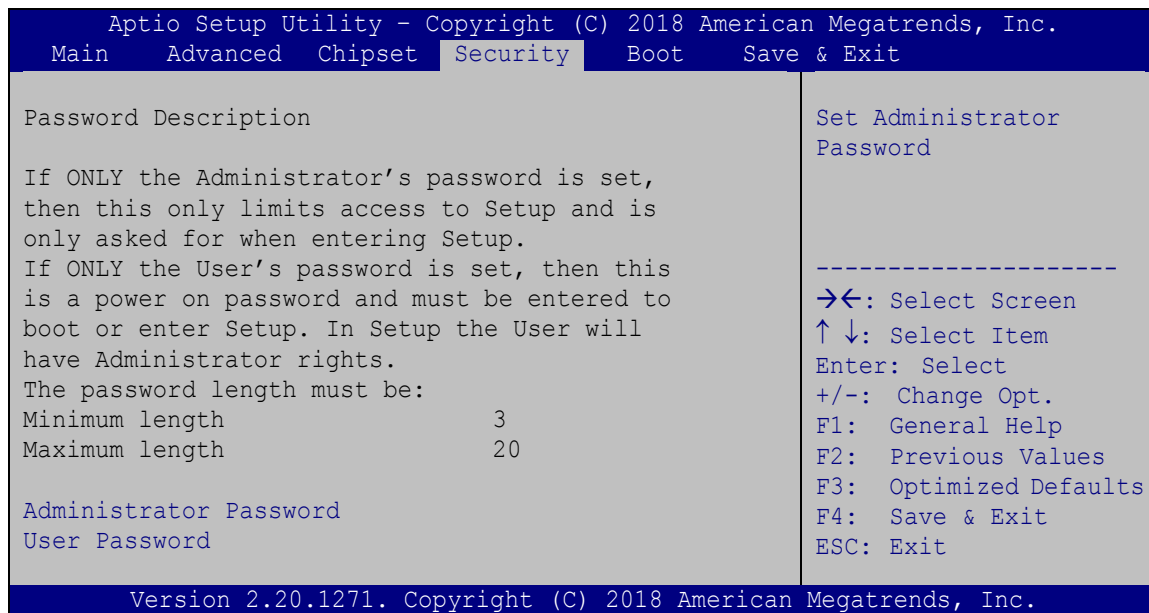

BIOS Menu 27: Security

→ Administrator Password


Use the **Administrator Password** to set or change a administrator password.

→ User Password

Use the **User Password** to set or change a user password.

5.6 Boot

Use the **Boot** menu (**BIOS Menu 28**) to configure system boot options.

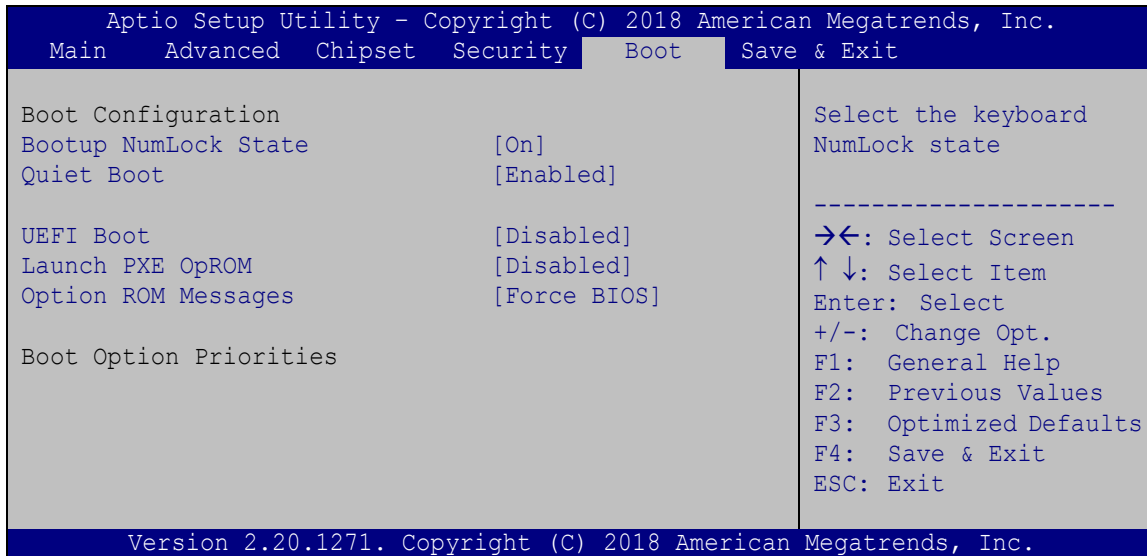

BIOS Menu 28: Boot

→ Bootup NumLock State [On]

Use the **Bootup NumLock State** BIOS option to specify if the number lock setting must be modified during boot up.

- **On** **DEFAULT** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.
- **Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

KINO-DH310 Mini-ITX Motherboard

→ Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- **Disabled** Normal POST messages displayed
- **Enabled** **DEFAULT** OEM Logo displayed instead of POST messages

→ UEFI Boot [Disabled]

Use the **UEFI Boot** option to enable or disable to boot from the UEFI devices.

- **Disabled** **DEFAULT** Boot from UEFI devices is disabled.
- **Enabled** Boot from UEFI devices is enabled.

→ Launch PXE OpROM [Disabled]

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

- **Disabled** **DEFAULT** Ignore all PXE Option ROMs
- **Enabled** Load PXE Option ROMs.

→ Option ROM Messages [Force BIOS]

Use the **Option ROM Messages** option to set the Option ROM display mode.

- **Force BIOS** **DEFAULT** Sets display mode to force BIOS.
- **Keep Current** Sets display mode to current.

5.7 Save & Exit

Use the **Safe & Exit** menu (**BIOS Menu 29**) to load default BIOS values, optimal failsafe values and to save configuration changes.

```
Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit

Save Changes and Reset
Discard Changes and Reset

Restore Defaults
Save as User Defaults
Restore User Defaults

Exit the system after
saving the changes.

-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
```

BIOS Menu 29: Save & Exit

→ Save Changes and Reset

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

→ Discard Changes and Reset

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

→ Restore Defaults

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

→ Save as User Defaults

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ Restore User Defaults

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY

This equipment has been tested and found to comply with specifications for CE marking. If the user modifies and/or installs other devices in the equipment, the CE conformity declaration may no longer apply.

FCC WARNING

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Appendix

B


Product Disposal

**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union–If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union–The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

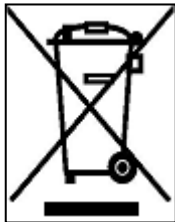

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your device, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

Appendix

C

BIOS Options

Below is a list of BIOS configuration options in the BIOS chapter.

<input type="checkbox"/>	System Date [xx/xx/xx]	72
<input type="checkbox"/>	System Time [xx:xx:xx]	72
<input type="checkbox"/>	Intel (VMX) Virtualization Technology [Disabled]	73
<input type="checkbox"/>	Active Processor Cores [All]	73
<input type="checkbox"/>	Intel(R) SpeedStep(tm) [Enabled]	74
<input type="checkbox"/>	C States [Disabled]	74
<input type="checkbox"/>	Security Device Support [Disable]	75
<input type="checkbox"/>	ACPI Sleep State [S3 (Suspend to RAM)]	76
<input type="checkbox"/>	PC Health Status	77
<input type="checkbox"/>	CPU_FAN1 Smart Fan Control/SYS_FAN1 Smart Fan Control [Auto Mode]	78
<input type="checkbox"/>	Auto mode fan start/off temperature	78
<input type="checkbox"/>	Auto mode fan start PWM	79
<input type="checkbox"/>	Auto mode fan slope PWM	79
<input type="checkbox"/>	Case Open Detection [Disabled]	79
<input type="checkbox"/>	Serial Port [Enabled]	80
<input type="checkbox"/>	Change Settings [Auto]	80
<input type="checkbox"/>	Serial Port [Enabled]	81
<input type="checkbox"/>	Change Settings [Auto]	81
<input type="checkbox"/>	Serial Port [Enabled]	82
<input type="checkbox"/>	Change Settings [Auto]	82
<input type="checkbox"/>	Serial Port [Enabled]	82
<input type="checkbox"/>	Change Settings [Auto]	83
<input type="checkbox"/>	Wake system with Fixed Time [Disabled]	84
<input type="checkbox"/>	Console Redirection [Disabled]	85
<input type="checkbox"/>	Terminal Type [ANSI]	86
<input type="checkbox"/>	Bits per second [115200]	86
<input type="checkbox"/>	Data Bits [8]	86
<input type="checkbox"/>	Parity [None]	86
<input type="checkbox"/>	Stop Bits [1]	87
<input type="checkbox"/>	Legacy Serial Redirection Port [COM1]	88
<input type="checkbox"/>	Legacy USB Support [Enabled]	88
<input type="checkbox"/>	Auto Recovery Function [Disabled]	90
<input type="checkbox"/>	VT-d [Disabled]	92

KINO-DH310 Mini-ITX Motherboard

<input type="checkbox"/>	Primary Display [Auto]	94
<input type="checkbox"/>	Internal Graphics [Enabled]	94
<input type="checkbox"/>	DVMT Pre-Allocated [32M]	94
<input type="checkbox"/>	DVMT Total Gfx Mem [MAX]	94
<input type="checkbox"/>	Primary IGFX Boot Display [VBIOS Default]	95
<input type="checkbox"/>	Enable Root Port [Enabled]	95
<input type="checkbox"/>	Max Link Speed [Auto]	96
<input type="checkbox"/>	Detect Non-Compliance Device [Disabled]	96
<input type="checkbox"/>	Restore AC Power Loss [Last State]	97
<input type="checkbox"/>	Power Saving Function(ERP) [Disabled]	98
<input type="checkbox"/>	USB Power SW1 [+5V DUAL]	98
<input type="checkbox"/>	USB Power SW2 [+5V DUAL]	98
<input type="checkbox"/>	M2(A) Slot / M2(M) Slot [Enabled]	100
<input type="checkbox"/>	PCIe Speed [Auto]	101
<input type="checkbox"/>	SATA Controller(s) [Enabled]	101
<input type="checkbox"/>	SATA Mode Selection [AHCI]	102
<input type="checkbox"/>	Hot Plug [Disabled]	102
<input type="checkbox"/>	HD Audio [Auto]	103
<input type="checkbox"/>	Administrator Password	103
<input type="checkbox"/>	User Password	103
<input type="checkbox"/>	Bootup NumLock State [On]	104
<input type="checkbox"/>	Quiet Boot [Enabled]	105
<input type="checkbox"/>	UEFI Boot [Disabled]	105
<input type="checkbox"/>	Launch PXE OpROM [Disabled]	105
<input type="checkbox"/>	Option ROM Messages [Force BIOS]	105
<input type="checkbox"/>	Save Changes and Reset	106
<input type="checkbox"/>	Discard Changes and Reset	106
<input type="checkbox"/>	Restore Defaults	106
<input type="checkbox"/>	Save as User Defaults	106
<input type="checkbox"/>	Restore User Defaults	106

Appendix

D

Digital I/O Interface

KINO-DH310 Mini-ITX Motherboard

D.1 Introduction

The DIO connector on the KINO-DH310 is interfaced to GPIO ports on the Super I/O chipset. The DIO has both 4-bit digital inputs and 4-bit digital outputs. The digital inputs and digital outputs are generally control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.



NOTE:

For further information, please refer to the datasheet for the Super I/O chipset.

The BIOS interrupt call **INT 15H** controls the digital I/O.

INT 15H:

AH – 6FH	
<u>Sub-function:</u>	
AL – 8	:Set the digital port as INPUT
AL	:Digital I/O input value

D.2 Assembly Language Sample 1

```

MOV    AX, 6F08H    ;setting the digital port as input
INT    15H          ;
    
```

AL low byte = value

AH – 6FH	
<u>Sub-function:</u>	
AL – 9	:Set the digital port as OUTPUT
BL	:Digital I/O input value

D.3 Assembly Language Sample 2

```

MOV    AX, 6F09H    ;setting the digital port as output
MOV    BL, 09H      ;digital value is 09H
INT    15H          ;
    
```

Digital Output is 1001b

Appendix

E

Watchdog Timer



NOTE:

The following discussion applies to DOS environment. Contact IEI support or visit the IEI website for specific drivers for other operating systems.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMIs or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table E-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

KINO-DH310 Mini-ITX Motherboard

**NOTE:**

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

EXAMPLE PROGRAM:

; INITIAL TIMER PERIOD COUNTER

;

W_LOOP:

;

```

MOV      AX, 6F02H      ;setting the time-out value
MOV      BL, 30         ;time-out value is 48 seconds
INT      15H

```

;

; ADD THE APPLICATION PROGRAM HERE

;

```

CMP      EXIT_AP, 1     ;is the application over?
JNE      W_LOOP        ;No, restart the application

MOV      AX, 6F02H     ;disable Watchdog Timer
MOV      BL, 0         ;
INT      15H

```

;

; EXIT ;

Appendix

F

Error Beep Code

KINO-DH310 Mini-ITX Motherboard

F.1 PEI Beep Codes

Number of Beeps	Description
1	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXE IPL was not found
3	DXE Core Firmware Volume was not found
4	Recovery failed
4	S3 Resume failed
7	Reset PPI is not available

F.2 DXE Beep Codes

Number of Beeps	Description
1	Invalid password
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met



NOTE:

If you have any question, please contact IEI for further assistance.

Appendix

G

Hazardous Materials Disclosure

KINO-DH310 Mini-ITX Motherboard

G.1 RoHS II Directive (2015/863/EU)

The details provided in this appendix are to ensure that the product is compliant with the RoHS II Directive (2015/863/EU). The table below acknowledges the presences of small quantities of certain substances in the product, and is applicable to RoHS II Directive (2015/863/EU).

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	Bis(2-ethylhexyl) phthalate (DEHP)	Butyl benzyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Housing	O	O	O	O	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O	O	O	O	O
Battery	O	O	O	O	O	O	O	O	O	O
<p>O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in Directive (EU) 2015/863.</p> <p>X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in Directive (EU) 2015/863.</p>										

G.2 China RoHS

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求。